



7.5 cu.ft. Refrigerator



ER82W | ER82SS

Congratulations on the purchase of your new EPIC Refrigerator!

To activate your Warranty, please register your appliance at **www.stirlingmarathon.com** or by completing and mailing the enclosed Warranty Registration Card. We are confident you will have years of hassle-free enjoyment and ask that you please retain the Use & Care Guide for future reference and your safety.

Before installing please, read your Use & Care Guide carefully and pay special attention to the Safety & Warning information outlined in the following pages.

For immediate assistance: 1-844-309-9777
www.stirlingmarathon.com

⚠ **WARNING** ⚠

To reduce the risk of fire, electrical shock, or injury follow these basic precautions when using your appliance.

1. **WARNING**----Keep ventilation openings with of the appliance enclosure or built-in structure, clear of obstruction.
2. **WARNING**----Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3. **WARNING**----Do not use electrical appliances inside the appliance
4. **WARNING**----**DANGER:** Never allow children to play with, operate, or crawl inside the appliance. Risk of child entrapment.
5. **WARNING**----**GROUNDING INSTRUCTIONS** This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electrical current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
6. **DO NOT USE AN EXTENSION CORD**
7. Use an exclusive 115V wall outlet. Do not connect your refrigerator to extension cords or together with any other appliance in the same wall outlet. Do not splice the cord.
8. Always unplug before any maintenance or service on the appliance.
9. If a component is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard.
10. Follow local regulations regarding disposal of the appliance due to flammable refrigerant and blowing gas. All refrigeration products contain refrigerants, which under the guidelines of federal law must be removed before disposal. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
11. This appliance is intended to be used in household and similar environment such as:
 - a) Staff kitchen, workshop, office and other working environments;
 - b) Farmhouses and by clients in hotels, motels and other residential type environments;
 - c) Bed and breakfast type environments;
 - d) Catering and similar non-retail applications.
12. Do not store or use gasoline or any inflammable liquors and liquids inside or in the vicinity of the refrigerator.
13. Do not use an extension cord with t his appliance. If the power cord is too short, have a qualified electrician install an outlet near the appliance. The use of an extension can negatively affect the appliance's performance

 
Before you discard or recycle your old refrigerator



- Completely remove the doors.
- Leaves the shelves in place so that children not may easily climb inside.

Parts Description



1. Hinge Cover
2. Door rails
3. Thermostat
4. Interior Light Switch
5. Tempered Glass Shelves
6. Vegetable Crisper
7. Leveling leg
8. Freezer shelf

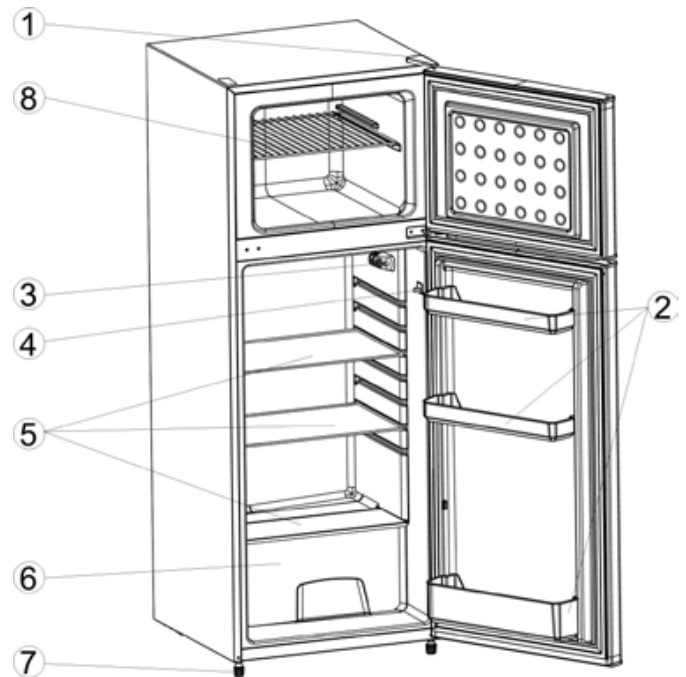

Installation


Installing your refrigerator

  - This appliance is designed to be free-standing only, and should not be recessed or built-in.
- **This unit is not designed for use in a garage, in a RV or any other outside installation.**
- Ambient temperature below 50°F (10°C) or above 85°F (29.4°C) will hinder the performance of this appliance.
- Avoid locating the refrigerator in high humidity areas.
- Locate the refrigerator away from direct sunlight and sources of heat (stove, heater, radiator, etc.).
- Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption.
- Select a location with enough space for the refrigerator doors to open easily;
- Select a location with level (or nearly level) flooring;
- Allow sufficient space to install the refrigerator on a flat surface;
- Allow clearance to the right, left, back and top when installing. This will help reduce power consumption and keep your energy bills lower.

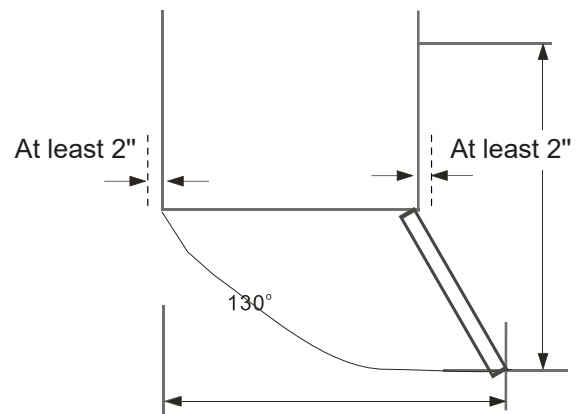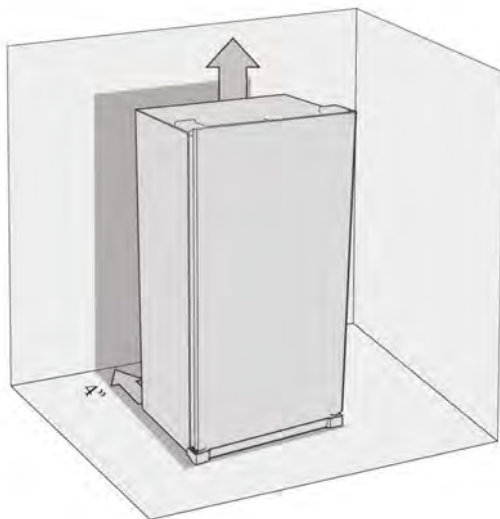

Levelling the refrigerator

 
To do this adjust the two levelling feet at front of the unit.
If the unit is not level, the doors and magnetic seal alignments will not be covered properly

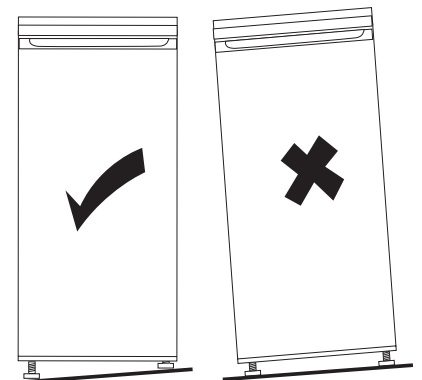

Reverse the door swing

CAUTION: To avoid personal injury to yourself and/or property, we recommend someone assist you during the door reversal process.

 Your refrigerator is built with a reversible door. You have the choice of either opening it from the left or the right side. In order to reserve your opening direction door, please follow these simple instructions.

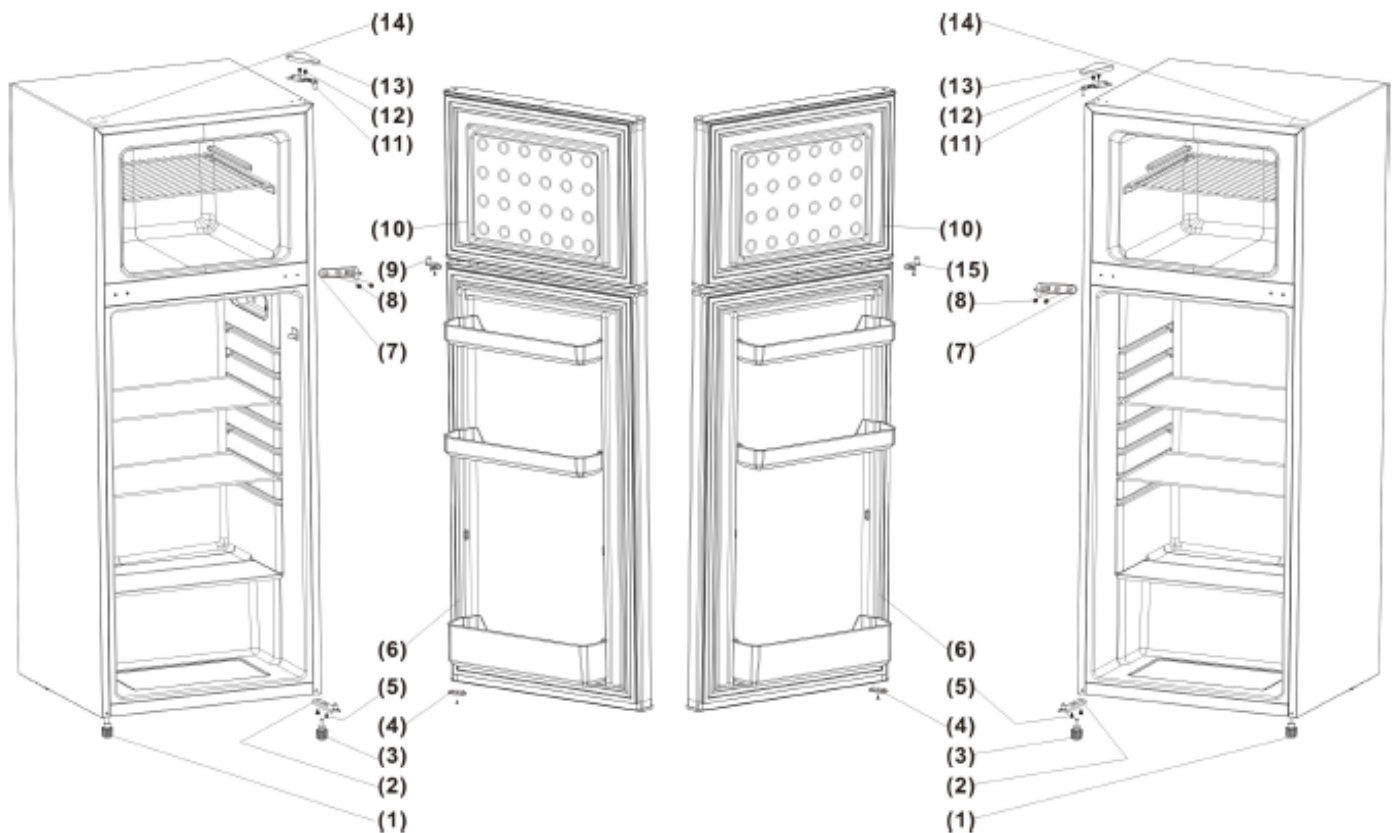

1) Disassemble all the reversible components in the sequence as shown below (also refer to left diagram above) Be sure to keep them well for later use in the process of reassembling)

- 1) Leveling leg II
- 2) Bottom hinge
- 3) Leveling leg I
- 4) Bottom door baffle block
- 5) 2 screws to hold bottom hinge
- 6) door, refrigerator section
- 7) Mid hinge
- 8) 2 screws to hold mid hinge

- 9) Upper door right stopper
- 10) Door, freezer section
- 11) Top Hinge
- 12) 2 screws to hold top hinge
- 13) Door hinge cover
- 14) Plug
- 15) Upper door left stopper

Reverse the door swing

- 2)** To access the bottom hinge assembly, you may tilt back the refrigerator cabinet or lay the refrigerator on its back.
- 3)** Remove the upper door right stopper (9), install the upper left stopper (15) on the opposite side; take down the bottom door baffle block (4), and install it on the opposite side.
- 4)** Reassemble the unit with the door hinges on the opposite side (see diagram). The sequence for reassembling is just in reverse order of disassembling.
- 5)** With the mid hinge not being fastened too tight, align two doors properly on the cabinet and then fasten the mid-hinge. If necessary, loosen the bottom hinge and the top hinge when aligning and then fasten them tight

Care and Cleaning

Before Using Your Refrigerator

- Remove the exterior and interior packing.
- Before connecting the refrigerator to the power source, let it stand upright for **approximately 4 hours**. This will reduce the possibility of a malfunction in the cooling system from improper handling during transportation.
- Keep ventilation openings on appliance clear of obstruction.
- Before maintaining or cleaning, turn off the refrigerator and disconnect the plug from the power outlet.
- Do not clean the appliance with any abrasive cleaners.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry
- Do not use sharp objects to remove frost from the appliance.
- Regularly examine the defrost drain of the refrigerator for defrosted water. If necessary, clean the drain line. If the drain is blocked, water will overflow into the bottom of the refrigerator and may cause water damage on the floor which is not covered under this manufacturer's warranty.

Cleaning the Defrost Drain

 
To avoid defrost water overflowing into the fridge and possibly onto your floor, periodically clean the drain hole at back of refrigerator compartment. (shown in right picture)



Operating Your Refrigerator

Temperature Settings

- Your refrigerator has one control for regulating the temperature. The temperature control is located on the top center of the refrigerator compartment.
- The first time you turn the unit on, adjust the temperature control knob to “7” and run for at least 2 hours before putting foods inside. This will ensure the cabinet is thoroughly chilled before food is put in.
- The range of the refrigerator temperature control is from position “1” the warmest to “7” the coldest. Adjust the temperature control to the setting that best suits your needs. The setting of “4” should be appropriate for home or office refrigerator use.
- Turning the temperature control knob to “0” position stops the cooling cycle but does not shut off the power to the unit.

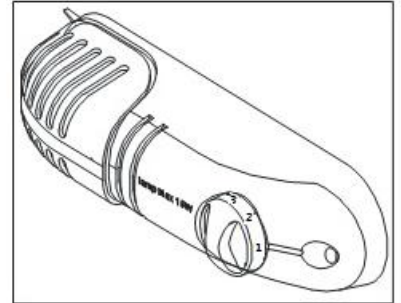

Note:

- If the unit is unplugged, loses power; you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the refrigerator will not start.
- Large amounts of food will lower the cooling efficiency of the appliance.
- Do not place the foods on the air outlet, and leave spaces for airflow.
- If you choose to change the thermostat setting, adjust thermostat control by one increment at a time. Allow several hours for temperature to stabilize between adjustments.

The Freezer Compartment

- This compartment is designed for the long-term storage of frozen food.
- The storage life of frozen foods varies and the recommended storage time should not be exceeded.
- Place frozen food into the freezer as quickly as possible after purchase. If there are instructions on the packet, carefully follow these instructions regarding storage times

When To Defrost

This unit is not designed to defrost automatically. In order to prevent damage to the interior liner of the unit from excessive frost build-up, please manually defrost the unit every 3 month or when ice / frost is approximately 1/4 “ thick inside the freezer compartment.

How To Defrost

Defrost the freezer compartment when the ice / frost are approximately 1/4” thick or every 3 months, whichever comes first. Set the thermostat dial to “0” to defrost. Remove all contents from the freezer compartment. Leave the freezer door open to allow accumulated ice / frost to melt. Remove large pieces of ice as needed. Do not use hot water or other electric heating devices to melt the accumulated ice. After defrosting, remove accumulated ice / water and wipe the freezer compartment dry with a soft cloth. In the event that the ice is not visibly present in the freezer compartment, please allow the evaporator located behind the freezer wall to completely defrost for approximately 2 hours before restarting the unit. Restart the unit per starting instructions.

Important Warning

⚠ This refrigerator is engineered with an "Automatic Cycle Defrost" system which keeps food fresher and uses less energy. The back wall of the refrigerator may appear to be "frozen" or "sweating" during the refrigerating and defrosting cycle - **This normal and that situation doesn't represent a malfunction of your appliance. Please do not push items directly against the back wall.** More information about Automatic Defrost is available at www.stirlingmarathon.com

⚠ Locate the refrigerator away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Ambient temperature below 50°F (10°C) or above 85°F (29.4°C) will hinder the performance of this appliance. **This unit is not designed for use in a garage, in a RV or any other outside installation.**

- ⚠ Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- ⚠ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ⚠ Do not change or damage the refrigerant circuit.
- ⚠ Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.
- ⚠ It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire and/or electric shock.
- ⚠ This appliance is intended to be used in residential household, office or light commercial applications such as Hotels and College Dorms.
- ⚠ All electrical components (plug, power cord, compressor and, etc.) must be replaced by a certified service agent or qualified service personnel.
- ⚠ The refrigerant contained within the compressor of the appliance is isobutene (R600a) which is environmentally friendly but flammable.
- ⚠ Make sure that the power cord is not crushed or damaged at the back of the appliance. A crushed or damaged power cord may overheat and cause a fire.
- ⚠ The power cord must not be lengthened.
- ⚠ Make sure that you can come to the power cord of the appliance Do not pull the mains cable.
- ⚠ If the electrical outlet is loose, do not insert the power plug. There is a risk of electric shock or fire.
- ⚠ You must not operate the appliance without the lamp.
- ⚠ This appliance is heavy. Care should be taken when moving it.
- ⚠ Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- ⚠ Avoid prolonged exposure of the appliance to direct sunlight.



Troubleshooting

You can solve many common refrigerator problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling for service.

Problem	Possible Causes
The refrigerator does not operate.	•The power cord is unplugged. •The circuit breaker is tripped/fuse blown.
The compressor turns on and off	•The room temperature is warmer than normal •A large amount of food has been added to the refrigerator. •The door is left open or is frequently opened. •The temperature control is not set correctly •The door is not closed completely. •The door gasket does not seal properly. •The refrigerator does not have the correct clearances. •The refrigerator has recently been disconnected for a period of time. 4 hours are required for the refrigerator to cool down completely
The temperature inside the refrigerator is too warm.	•Temperature control is set too warm. Turn the control to a cooler setting and allow several hours for the temperature to stabilize. •Door is kept open too long or is opened too frequently. Warm air enters the refrigerator every time the door is opened. Open the door less often. •The door is not closed completely. •The door gasket does not seal properly. •A large amount of warm or hot food was stored recently. Wait for the refrigerator to reach its selected temperature. •The refrigerator has recently been disconnected for a for a period of time. 4 hours are required for the refrigerator to cool down completely.
The temperature inside the refrigerator is too cold	•Temperature control is set too cold. Turn the control to a warmer setting and allow several hours for the temperature to stabilize.
Temperature of external refrigerator surface is warm.	The exterior refrigerator walls can be as much as 30 ° F warmer than room temperature. This is normal while the compressor works to transfer heat from inside the refrigerator cabinet.
Vibrating or rattling. (slight vibration is normal)	•Levelling legs need adjusting. •Floor is uneven or weak. Refrigerator rocks on the floor when it is moved slightly. Be sure floor can adequately support refrigerator. Level the refrigerator by putting wood or metal shims under part of the refrigerator. •The refrigerator is touching the wall. Re-level the refrigerator and move it away from the wall.
The temperature of the external of the refrigerator's surface is warm	•The exterior refrigerator walls can be as much as 30°F warmer than room temperature. •This is normal while the compressor works to transfer heat from inside the refrigerator cabinet.
Moisture collects inside the refrigerator.	•Weather is hot and humid, which increases internal rate of frost build-up. This is normal. •The door is slightly open or is frequently opened. •The door is not sealed properly.
Moisture forms on the outside of refrigerator.	•Is normal in hot and humid weather. Air carries moisture into the refrigerator when doors are opened
Bubbling or gurgling sounds. (like boiling water)	•This is normal sound of refrigerant (used to cool the refrigerator) circulating throughout the system
Popping or crackling sounds when the compressor comes on.	•This is the normal. Metal parts undergo expansion and contraction. The sound will level off or disappear as the refrigerator runs.
The door will not close properly.	•The refrigerator is not on a level surface. •The gasket is dirty. •A storage basket is out of position.



1 Year Limited Warranty

When operated and maintained according to the instructions in the Use & Care Guide, EPIC a registered trademark of Stirling Marathon Limited agrees to repair or replace this product for 1 year from the date of original purchase and/or agrees to pay for parts and service/labour required to correct defects in materials or workmanship. Any Service must be approved and provided by an Authorized Stirling Marathon Service provider. YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AT THE SOLE DISCRETION OF STIRLING MARATHON LIMITED AS PROVIDED HEREIN. This limited warranty is valid only in Canada and the Continental United States with proof of original purchase and confirmed warranty registration.

TERMS OF WARRANTY BY PRODUCT	Capacity/Type	Warranty Type
Refrigeration & Freezer	Less than 6 cu.ft	Carry-In
Refrigeration & Freezer	Greater than 6 cu.ft.	In-Home
Electric & Gas Ranges	All Sizes	In-Home

How to Obtain Service

Carry-In: The original purchaser must deliver or ship the defective product to an authorized Stirling Marathon Service present a copy of the original bill of sale or Warranty Registration Confirmation.

In-Home: Contact Authorized Service Center and provide a copy of the Original bill of sale or Warranty Registration Card. If you are in a remote area or the closest Authorized Service Center is further than 100 km (60 miles), you will be required to deliver the appliance to the closest Service Center at your expense.

Stirling Marathon is not responsible or liable for any spoilage or damage to food or other contents of this appliance, whether due to any defect of the appliance, or its use, whether proper or improper.

Items Excluded from Warranty

- Damages due to shipping or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Commercial or Rental Use Limited to 90 days Parts & Labour.
- Plastic parts such as door bins, panels, door shelves, racks, light bulbs, etc.
- Punctures to the evaporator system due to improper defrosting of the unit.
- Service or Repair by a unauthorized service technicians.
- Service calls that do not involve defects in material and workmanship such as instruction on the proper use of the product, door reversal or improper installation.
- Replacement or resetting of house fuses or circuit breakers.
- Delivery costs incurred as the result of a unit that fails.
- Expenses for travel and transportation for product service if your appliance is located in a remote area where service by an unauthorized service technician is not available.
- The removal and reinstallation of your appliance if it is not installed correctly or is in an inaccessible location, as per the published installation instructions.
- Liability under this warranty is limited to repair, replacement or refund. If a replacement unit is not available or the unit cannot be repaired, liability is limited to the actual.
- Purchase price paid by the consumer.
- This warranty applies only to the original purchaser and does not extend to any subsequent owner(s) and is non-transferable.
- No warranty or insurance herein contained or set out shall apply when damage or repair is caused by any of the following:
 - accident, alteration, abuse or misuse of the appliance such as inadequate air circulation in the room or abnormal operating conditions (extremely high or low room temperature).
- Use for commercial or industrial purposes (i.e. If the appliance is not installed in a domestic residence). Fire, water damage, theft, war, riot, hostility, acts of God such as hurricanes, floods etc.
- Service calls resulting in customer education.
- Improper installation (ie. Building-in of a free-standing appliance or using an appliance outdoors that is not approved for outdoor application).