



Scan the QR code to see the manual.



OWNER'S MANUAL

STYLER



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

ENGLISH

SC5GMR80H



MFL71825977
Rev.01_052325

www.lg.com

Copyright © 2025 LG Electronics. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.
This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE..... 3
WARNING STATEMENTS 4

INSTALLATION

Parts and Specifications 13
Installation Place Requirements 17
Unpacking the Appliance 18
Levelling the Appliance 19

OPERATION

Operation Overview..... 22
Preparing Loads 23
Checking the Items before Every Load 24
Loading the Appliance..... 26
Using the High Pressure Handy Steamer 31
Control Panel 36
Programme Table 38
Settings..... 46

SMART FUNCTIONS

LG ThinQ Application 48
Smart Diagnosis 50

MAINTENANCE

Regular Cleaning..... 51

TROUBLESHOOTING

Before Calling for Service..... 55

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk.

Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the appliance.

Notes for Flammable Refrigerant(R290)

The following symbols are displayed on units.



This symbol indicates that this appliance uses a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.



This symbol indicates that service personnel should be handling this equipment with reference to the Installation Manual.



This symbol indicates that information is available in the Owner's Manual or Installation Manual.

WARNING STATEMENTS

WARNING

- To reduce the risk of fire or explosion, electric shock, property damage, injury to persons or death when using this appliance, follow basic safety precautions, including the following:
-

Technical Safety

- This appliance contains R290, a refrigerant that is environmentally friendly but flammable. Do not damage the refrigerant circuit, keep an open flame and ignition sources away from the appliance.
- If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes. In order to avoid the creation of a flammable gas air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance is used should correspond to the amount of refrigerant used. The room must be 1 m³ in size for every 8 g of R290 refrigerant inside the appliance.
- Refrigerant leaking out of the pipes could ignite or cause an explosion.
- The amount of refrigerant in your particular appliance is shown on the identification plate on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not, under any circumstances, cut or remove the ground prong from the power cord. To prevent personal injury or damage to the appliance, the electrical power cord must be plugged into a properly grounded outlet.

- This appliance must be plugged into a 220-240 VAC, 50-Hz grounded outlet protected by a 15-ampere fuse or circuit breaker. Failure to follow these instructions can result in fire, explosion, or death.
- This appliance must be plugged into a properly grounded outlet. Electrical shock can result if the appliance is not properly grounded. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. Failure to follow these instructions can create an electric shock hazard and/or a fire hazard.
- Install the appliance where the plug is easily accessible. Unplug the appliance when not in use to avoid risk of fire or electric shock.
- Unplug the appliance before disassembly or repair to avoid risk of electric shock.
- The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.
- Do not use an extension cord to connect to an outlet. Doing so could result in a fire or electric shock.
- Never unplug your appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet. The power cord can be damaged, resulting in a risk of fire and electric shock.
- Contact LG or a qualified repair person immediately to repair or replace all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. The power cord can melt, creating electric shock and/or fire hazard.
- When installing or moving the appliance, be careful not to pinch, crush, or damage the power cord. This will prevent injury and damage to the appliance from fire and electric shock.
- After use, cool down the **High pressure handy steamer** sufficiently for 5 minutes or more before storing it. Touching the steamer head or the steam hose before it has cooled down sufficiently may result in burns.

- Pull out the power plug and fill the water tank with water or clean the product.
- If the product is damaged and the inside of the product is exposed, do not touch the **High pressure handy steamer** and contact an authorized service centre.

WARNING - To avoid a fire



Do not wash or dry clothes or items that have any contaminants of flammable solvents or substances. Do not clean the product with, or expose it to, flammable substances.

Installation

- When moving the appliance away from the wall, be careful not to roll over or damage the power cord.
- The appliance is heavy. Two or more people are necessary to move and install the appliance to prevent damage or injury.
- Prior to use, ensure that you are connecting the appliance to a dedicated grounded electrical outlet rated for use with the appliance. It is the user's responsibility to replace a standard 2-prong wall outlet with a standard 3-prong wall outlet.
- Before use, the appliance must be properly installed as described in this manual. Electric shock can result if the appliance is not properly grounded.
- Do not install the appliance where there may be a danger of the appliance falling. The appliance is not designed for use on transportations such as ship and airplane. Check with an authorized LG service centre for use under other special circumstances.
- Do not tamper with controls.
- Install the appliance where the floor is firm and level. The appliance may vibrate excessively and eventually fall if installed on an unstable surface, causing damage or injury.

- Do not truck the appliance from the front side and keep the front side protected always. Failure to do so the tempered glass on the appliance may be broken.
- Properly ground the appliance to conform with all governing codes and ordinances. Follow the details in the installation instructions.
- Install and store the appliance where it will not be exposed to temperatures below freezing or exposed to the weather. Allow the appliance to warm to room temperature before use if it was delivered in winter or at sub-zero temperature.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- To reduce the risk of electric shock, do not install the appliance in humid spaces such as a bathroom. Failure to follow this warning can cause death, serious injury, fire, electric shock, or product deformation or malfunction.
- Remove all packing items and dispose of all shipping materials properly.
- Connect to a properly rated, protected, and sized power circuit to avoid electrical overload. Improper power circuits can melt, creating electric shock and/or fire hazard.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.
- Keep all packaging from children. Packaging material can be dangerous for children.
- Do not install near another heat source such as a stove, oven or heater.
- Do not place candles, smoking materials, or other flammables on top of the appliance.
- Remove all protective vinyl film from the appliance.
- The appliance shall be installed in accordance with national wiring regulations.

- Do not tilt the appliance backwards while there is water in the water tank. When moving or reinstalling the appliance, drain the water tank. If tilting the appliance while there is water in the water tank, water may overflow inside the appliance and the appliance may not operate normally.
- When installing the appliance, avoid any location where it comes into direct contact with the wind from the air conditioner. Failure to comply may result in condensation due to a difference in temperature between the inside of the appliance and the location.

Operation

- Do not use it on objects other than clothing.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not climb, stand, or hang on the appliance door or on the shelf or anywhere inside the appliance.
- Do not step on the doors to the water tanks.
- Do not place heavy or dangerous objects on top of the appliance.
- Do not put live animals inside the appliance.
- Do not allow children to climb into the appliance.
- In the event of a gas leak (propane/LPG), ensure adequate ventilation and contact an authorized service centre before resuming use. Do not touch or disassemble the electrical outlet of the appliance.
- Do not use or place flammable substances (chemicals, medicine, cosmetics, etc.) near the appliance or store them inside the appliance. Do not place the appliance in the vicinity of flammable gas.
- Disconnect the power cord immediately if you hear a noise, smell a strange odour or detect smoke coming from the appliance.
- In the event of a flood, do not go near the appliance and contact an authorized service centre.
- Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.


- Do not place hands or body near steam nozzle during operation. The steam is hot and could cause an injury.
- Do not insert objects into the steam nozzle.
- Do not drink the water from the water drain and supply tanks.
- Do not disassemble or modify the appliance.
- Do not put hands, feet, or metal objects below the appliance.
- Do not operate the appliance or touch the power cord with wet hands.
- Keep fingers out of pinch point areas; clearances between the door and cabinet are necessarily small. Be careful closing door when children are nearby.
- Do not place items exposed to cooking oils in the appliance. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Do not open door during operation. The performance of the appliance may be adversely affected. If the appliance is installed on or near carpet, condensation from escaping hot air or steam may stain or damage the carpet.
- Damage incurred by using the appliance for purposes other than those specified in this user manual is not covered by the warranty.
- The **High pressure handy steamer** is designed for home use. Do not use it for other purposes.
- The Steamer is only for LG Styler, so do not install it on other home appliances or use it for other purposes.
- When the product is on or operating, do not spray steam towards a person or an animal. Doing so may cause burns by steam.
- Do not use the Steamer on clothes that are being worn.

- When the product is on or operating, do not allow children or pet animals to come near the product.
- After operation, do not put your hands or feet on the steamer head or steam hose of the Steamer. Doing so may cause burns due to residual heat.
- Do not use the Steamer on glass. Doing so may damage glass and result in injury.
- Do not use the Steamer on electronics. Doing so may result in malfunction or damage to the electronics.
- Be careful not to allow children or pet animals to play with the Steamer.
- Do not apply impact on the Steamer or drop the Steamer. If The Steamer is damaged, do not touch it and contact an authorized service centre.
- Do not use Steamer for clothing (Functional sports wear (Gore-Tex), fur, leather, artificial leather, coated materials, etc.) that can be damaged by steam.
- Do not pull the Steamer forcibly as the parts in the **High pressure handy steamer case** may be damaged.
- While using the Steamer, do not close the Styler door and the storage box. Doing so may scratch the edge of the steamer storage box cover, leave scratch marks on the inside of the door, and damage the storage box cover or the steam hose.
- When using Steamer to clothing made of rayon may shrink, so use the Low mode.
- When you turn on the Steamer and spray steam for the first time, condensed water may be sprayed and leave water marks on clothing depending on the surrounding environment, so spray steam into the air 2-3 times for 2-3 seconds before use.
- Depending on the usage environment, moisture may form near the Steamer head and inside the Styler, so wipe off moisture with a dry towel before storing the Steamer.

- If the steam nozzle is clogged, unplug it with a pin or toothpick. Be sure to clean the nozzle after turning off the Styler and letting it cool down sufficiently for 30 minutes or longer.

Maintenance

- Wipe foreign objects (such as dust and water) off the prongs of the power plug and contact areas regularly. Do not use a wet or damp cloth when cleaning the plug.
- Do not use an appliance to dry the interior. Do not light a candle to remove interior odours.
- Do not spray water onto the appliance directly when cleaning. A fire or electric shock may occur.
- Wipe the interior with a dry cloth after use.
- Clean the lint filter before or after each load.
- Do not use a bleaching agent such as oxygen or chlorine-based bleaches on the exterior of the appliance.
- Do not use sharp objects when cleaning or operating the controls. An electric shock may occur.
- Avoid hitting the front glass panel with heavy objects. Although it is made of tempered glass, the panel may break in the event of a strong impact and cause injury.
- Keep product free from rodents, insects, and other foreign objects. They may damage wires, causing fire or electric shock.
- Install the lint filter cover ❶ and the lint filter ❷ correctly to ensure that the smart lighting sensor operates correctly and dust is collected properly. The mirror surface at the bottom of the lint filter cover is a part for the sensor, so keep it clean with a dry cloth.

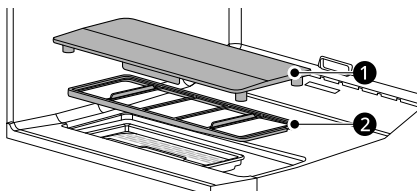

Disposal

- Before the appliance is removed from service or discarded, remove the door to the drying compartment. Cut off the power plug and destroy the button section to prevent reuse.

Grounding instructions

- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt that the appliance is properly grounded.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance must be equipped with a cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Do not modify the plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- This appliance must be connected to a grounded metal, permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the appliance. Electric shock can result if the appliance is not properly grounded.


INSTALLATION

Parts and Specifications

NOTE

- Appearance and specifications may vary without notice to improve the quality of the appliance.

Interior

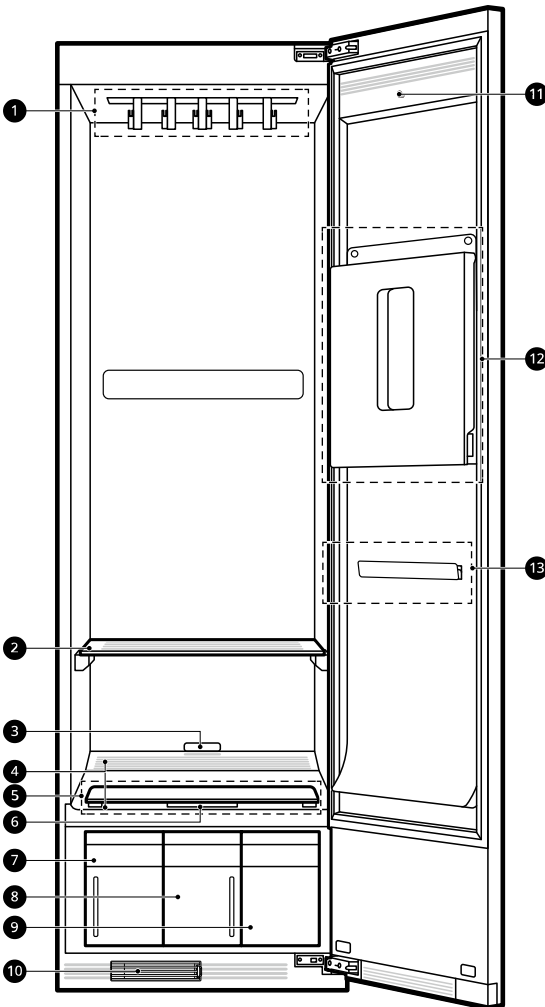

- ① Moving hanger
- ② Shelf
- ③ Light sensor
- ④ Hot air circulation vent
- ⑤ Lint filter cover
- ⑥ Aroma sheet case
- ⑦ Water drain tank
- ⑧ Water supply tank
- ⑨ High-pressure handy steamer case
- ⑩ Dehumidification filter
- ⑪ Hanger holder
- ⑫ Pants crease care
- ⑬ Shelf holder

14 INSTALLATION

NOTE

- The door swing can be reversed by the installer to fit the installation location.
-

Specifications


Asterisk(s) means model variant and can be varied (0-9) or (A-Z).

Model	SC5GMR80H
Power Supply	220-240 V~ 50 Hz
Dimensions (Width × Depth × Height)	600 mm × 620 mm × 1965 mm, 1185 mm (Depth with door open)
Product weight	92 kg
Power consumption	1800-2000 W
Maximum capacity	6 items


Accessories



 
①




②

 


③

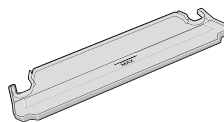

④

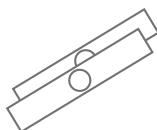

⑤

 

⑥



⑦



⑧

- ① 5 Regular Hangers
- ② Shelf
- ③ Aroma Sheet
- ④ Drip tray
- ⑤ 2 Hinge Covers
- ⑥ Wrench
- ⑦ cleaning glove
- ⑧ protective glove


NOTE

- The included accessories vary depending on the model you purchased.
 - Contact the store where the appliance was purchased or LG customer service if any accessories are damaged or missing.
 - For your safety and for extended product life, use only authorized components. The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased unauthorized components or parts.
-

Installation Place Requirements

Before installing the appliance, check the following information to make sure that the appliance should be installed in a correct place.

Dimensions

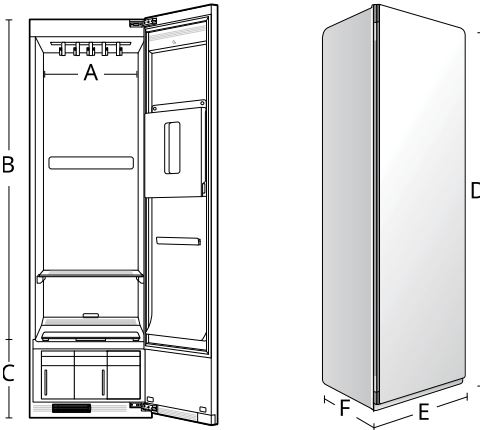

- Ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.
- Do not install the appliance in an area where it will be exposed to water, wind, rain and direct sunlight. Do not install or use the Styler in any outdoor location. Failure to follow this warning could result in risk of electric shock, injury, or product damage or malfunction.
- Do not install the appliance on any elevated surface, plinth or stand, hollow or any flexible platform. Doing so may cause excessive noise and vibration and result in damage or injury if the appliance tips over.
- Avoid any location where it comes into direct contact with the wind from air conditioner ducting or direct air outlet.
 - Condensation may occur due to a difference in temperature between the inside of the product and the wind from the air conditioner.

NOTE

- A sturdy floor should support the total appliance weight of **92 kg**. The combined weight of any other laundry appliances should also be considered.


	Dimensions (mm)
A	535
B	1570
C	395
D	1965
E	600
F	620

Installation Location

- A grounded electrical outlet should be located within 61 cm of either side of the appliance.
- Install the appliance on a flat floor. (Allowable slope under the appliance: 1°)
- The floor must be level, with a maximum slope of 2.5 cm under the appliance. If the slope is greater than 2.5 cm, the appliance cannot be levelled properly

Recommended Installation Spacing

The following clearances are recommended for the appliance. Recommended clearances should be considered for the following reasons:

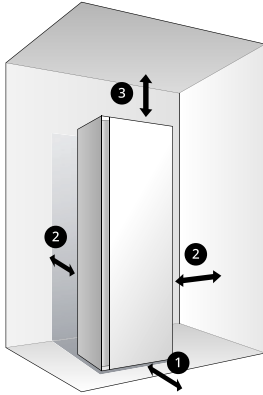

- 1 Allow at least **61 cm** in front to open the door.
- 2 Allow at least **5 cm** on both sides and between the back of the appliance and the wall.
- 3 Allow at least **20 cm** between the top of the appliance and any overhanging shelves or cabinets.

NOTE

- If the appliance is too close to adjacent items, performance may decrease and electricity consumption may increase.
- Additional space should be considered on all sides of the appliance to reduce noise transfer. Make sure there is more than 20 cm of circulation ventilation space above the machine door.

Ambient Temperature

- Temperature must be between 10 °C and 35 °C.
- If the ambient temperature is too low or high, performance may be affected.
- Do not install in direct sunlight or where the temperature may fall below 0 °C.

Electrical Connection

- Do not use an extension cord or double adapter.
- Do not overload the outlet with more than one appliance.
- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned a place close to outlet sockets so that the plug is easily accessible.

⚠ WARNING

- The power plug must be plugged into an appropriate outlet socket that is installed and grounded/earthed in accordance with all local codes and ordinances.

Unpacking the Appliance

⚠ WARNING

- Use two or more people to unpack and move the appliance. Failure to do so can result in serious injury by tipping the appliance.

Removing carton and shipping materials

Unpack the appliance from carton then remove any tapes and temporary labels from the appliance.

- Do not remove any warning labels, the model and serial number label, or the technical sheet label that is located under the front of the appliance.

⚠ CAUTION


- Do not use sharp instruments, rubbing alcohol, flammable fluids, abrasive or solvent based cleaners to remove tape or glue or to clean the inside or outside of the appliance. These products can damage the surface of the appliance.

NOTE

- Tape or glue residue can also be easily removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

Moving the Appliance

Use the wheels ① at the bottom of the appliance to move the appliance. Push the appliance slowly from about halfway down the front side.

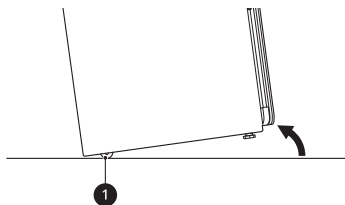


follow this warning can cause serious injury or death.

- 1 Position the appliance in the final location and check to make sure it is level.
 - All levelling feet must rest solidly on the floor. Gently push on the corners of the appliance to make sure that it does not rock from corner to corner. Make sure there are no gaps between the front levelling feet and the floor.
- 2 Use the wrench (packaged with the appliance) to turn the levelling feet.
 - Unscrew the front feet to raise the appliance or screw in the feet to lower it. If unable to level the appliance using only the front feet, install the two rear levelling feet by tipping the appliance. Do not lay the appliance down to install the levelling feet.
 - Raise or lower the appliance using the levelling feet until the appliance is level from side to side and front to back.

⚠ CAUTION

- Keep the appliance upright when moving it. If you lay the appliance on its side, refrigerant may leak and cause the appliance to malfunction.

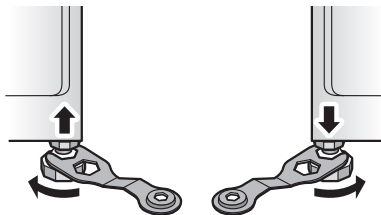**Levelling the Appliance****Checking the Level**

Levelling the appliance prevents unnecessary noise, vibration and movement. Check whether the appliance is perfectly level after installation.


Adjusting and Levelling the appliance**⚠ WARNING**

- The appliance is heavy. Two or more people are required when levelling the appliance. Failure to

⚠ CAUTION

- Make sure that all levelling feet are in firm contact with the floor. If the appliance is used without levelling, it may fall, causing injury, damage, or product malfunction.
- Adjust the levelling feet only as far as necessary to level the appliance. Extending the levelling feet more than necessary can cause the appliance to vibrate.

- 3 When the appliance is completely stable and all levelling feet are resting solidly on the floor, tighten the locking nuts ①.

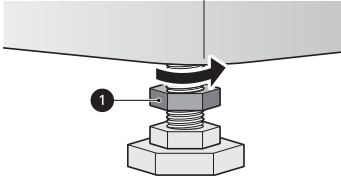

Reversing the door

It is possible to reverse the direction of the door swing. This should be done by the installer at the time of installation, if desired.

NOTE


- If the direction of the door swing needs to be changed after installation, contact the LG Customer Information Centre.

Assembling the drip tray

Before using the appliance, insert the drip tray onto the bottom of the cabinet.

- 1 Hold the tray so the arrow and letter on the front of the tray face up.

- 2 Insert one side of the tray first, then the other. Push the tray until it slides completely in.

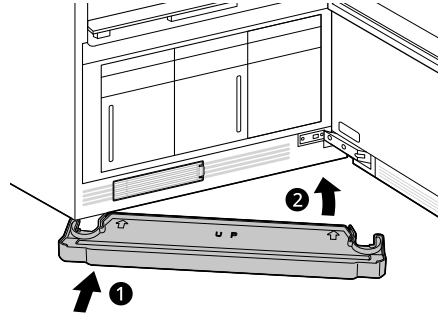


- 3 To detach, pull one side out then the other.
- If the tray collects water, detach it and empty the water. After emptying it, reassemble the tray.

⚠ CAUTION

- Do not operate the appliance without installing the drip tray. Doing so could lead to water damage caused by leaking.

Installing hinge covers

- 1 Open the appliance door.
- 2 Snap the hinge cover onto the upper hinge assembly with the bent edge on the far side from the hinge.

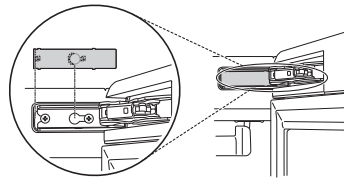

- 3 Repeat with the remaining hinge cover on the lower hinge assembly.

OPERATION

Operation Overview

Using the Appliance

1 Prepare items.

- Wash clothes first, if needed.
- No heat-sensitive items or items that can be damaged by exposure to water.
- Place items on hangers or the shelf.
- Fasten buttons and close zippers to keep items on moving hangers and prevent damage.

2 Clean the lint filter and change the sheet in the aroma filter.

- Lift out filter and remove lint from last load for faster and more efficient performance. Reinstall filter, checking alignment when closing grill. Do not operate the appliance without the lint filter in place. If using a fabric softener sheet in the aroma filter, change it after every use.

3 Check the water tanks.

- Fill water supply tank if needed. Empty water drain tank if needed. Use clean tap water in the supply tank for better product performance and lifespan. Do not use distilled water or reuse water from the drain tank.

4 Load the appliance.

- Pay attention to fabric care labels and programme choice. If clothing is not appropriate for the programme selected, it may shrink or be seriously damaged.
- Remove all empty hangers to avoid noise, friction, and damage to clothing.

5 Turn on the appliance.


- Touch **Power** button to turn on the appliance.

NOTE

- The control panel operates in touch method. Read the following information and operate it.
 - If there is any foreign object on the control panel, it will not operate. Wipe the control panel clean before use.
 - If you press the control panel with a gloved hand or other material, it will not operate.

6 Choose a desired programme.

- Change the course by swiping the screen left and right or pressing the buttons (<, >) as follows.

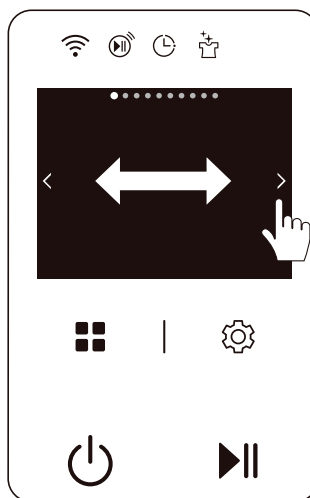

NOTE

- By pressing the **Arrangement** (2x2 grid) button at the bottom of the touch display, you can see 4 courses on the split screens.

7 Begin a programme.

- Touch and hold **Start/Pause** button to begin a programme. Pause programme at any time by touching **Start/Pause** button again. If the **Start/Pause** button is not pressed within a certain time, the appliance will shut off and all settings will be lost.
- Do not open door during programme. If steam or hot air escapes from open door, condensation may collect on floor or walls, resulting in damage or mold.

⚠ CAUTION

- Do not open the door during operation. There is a risk of burns or injury from escaping hot air or steam.
- Do not allow steam or hot air to escape the cabinet during operation. Opening the door during operation also affects performance, lengthens styling time, and results in water condensing and collecting on the floor.

8 End of programme.



- Remove items when programme finishes. Leave door open to let hot air escape. Interior light shuts off after 1.5 minutes if door is left open.
















Preparing Loads

Checking the Fabric Care Labels

Most articles of clothing feature fabric care labels that include instructions for proper care. Below are some of the symbols that are relevant to choosing appropriate items for the appliance.

Symbols on the care labels

Label	Meaning	Check
	Hand Wash	OK
	Machine Wash, Normal cycle	OK

Label	Meaning	Check
	Perm press/wrinkle resistant	OK
	Gentle/delicate	OK
	Do not wash	OK*1
	Normal	OK
	Permanent press/wrinkle resistant	OK
	Gentle/delicate	OK
	Do not tumble dry	OK
	Do not dry	NO
	Line/hang dry	OK
	Drip dry	OK
	Dry flat	OK
	High	OK
	Medium	OK
	Low	OK
	No heat/air dry	NO

*1 Some items such as fur and leather, which are labelled as do not wash, can be used with the appliance.

Sorting the items

- For best fabric care results, always treat fabrics with similar care requirements together.
- Different fabrics have different care requirements, and some fabrics cannot be treated in certain programmes or should be treated separately.

Checking the items before Loading

Some items are not appropriate for use with the appliance. Using the wrong programme for items can result in damage to fabrics.


- Check all pockets to make sure that they are empty. Items such as clips, pens, coins, and keys can damage both the appliance and your clothes.
- Do not put items that are sensitive to heat or are not suitable for washing with water in Styler programmes that use steam. Use the **Dry** programme only.
- Fur, leather (only 100% natural leather) should only be treated with the **Fur/Leather Refresh** programme. This programme is a downloadable programme.
- Wash heavily soiled or stained clothes before putting them in the appliance. The appliance does not have a washing function. Loose soil or stains can be transferred between garments during programmes.
- Treat items with an unpleasant odour in a separate load. Odours can be transferred between items during programmes.
- Clothing should be securely fastened, with zippers and buttons closed, so that it does not fall off the moving hanger during the programme.
- Do not put very wet items in the appliance to dry. Shake off or wring out excess water before putting items in the cabinet to dry. If a large amount of water pools in the cabinet, styling performance may suffer or the appliance may be damaged.

Checking the Items before Every Load


Checking the Lint Filter

Always make sure the lint filter is clean before starting a new load; a clogged lint filter will increase styling times.


- 1 Take out the Lint filter cover ❶ and the lint filter ❷.

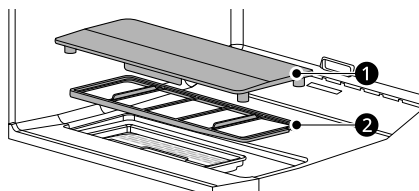

- 2 Brush the lint filter with a soft brush or clean it with a vacuum cleaner.
 - If the lint filter is torn or damaged, replace it with a new one.

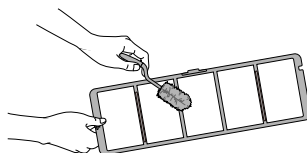


- 3 Reinstall the lint filter ❷ and the lint filter cover ❶ properly.
 - Install the lint filter cover in the way that its guide (▽) faces the front of the appliance.

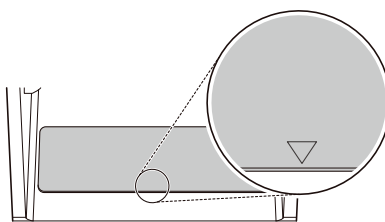


Checking the Aroma Sheet

Insert one aroma sheet, use it 2 or 3 times, and then replace it with a new sheet. If you want rich aroma, replace it after using it 1 or 2 times.


- 1 Take out the lint filter cover.

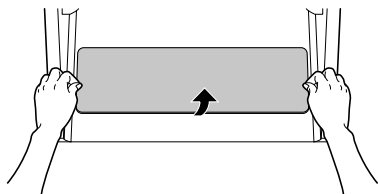

- 2 Remove the aroma filter ① from the back of the lint filter cover ②.

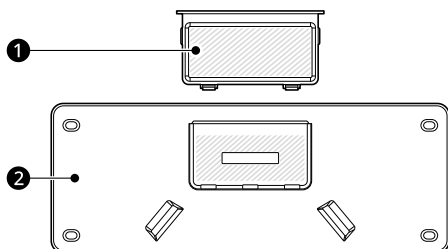


- 3 Open the aroma filter, insert an aroma sheet, and then close the aroma filter.

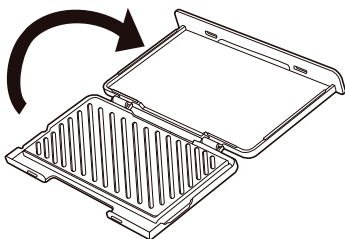

- 4 Insert the aroma filter into the back of the lint filter cover.

- 5 Reinstall the lint filter cover on top of the lint filter correctly.

- Install the lint filter cover in the way that its guide (▽) faces the front of the appliance.

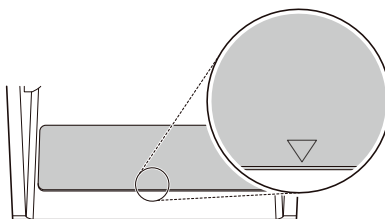


NOTE

- Spray perfume 4-5 times on a cotton pad and then place it in the Aroma Holder to use. (However, the fragrance strength can vary depending on the scent.)

Checking the Water tanks

Check the water in the water tanks before use. The water supply tank must be filled with water before using the appliance. The appliance does not work without water. The water drain tank should be emptied before each use.

- 1 Pull the handle of the tank forward and then take the tanks out of the appliance. Check water level of the tanks.

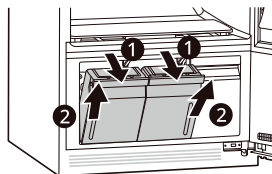

- 2 Make sure the water supply tank is filled with water.

- The full water supply tank can be used approximately four times, depending on the programmes used.
- Use clean tap water or bottled water for best performance and longer product life. Do not use distilled water or reuse the water from the drain tank.

- The first time the appliance is used, 2/3 of the water in the fully filled water supply tank is used. Less water is used in following programmes.

⚠ CAUTION

- Only use water when filling the water supply tank. Any other substance, such as detergent or fabric softener, may damage the appliance.
- Use only clean tap water or bottled water. Foreign materials in the water may shorten the lifespan of the appliance.
- Do not use distilled water. The water sensor may not work.
- Do not reuse the water in the drain tank to fill the water supply tank.

3 Make sure the water drain tank is empty.

4 The drain tank will be filled after about three uses. The tank fills more quickly during styling programmes. The appliance does not work if the drain tank is full.

- Some discolouration of the water drain tank may occur over time. This is normal and will not affect product performance.

Loading the Appliance

⚠ WARNING


- Flammable objects such as lighters or matches could ignite, causing a fire. Remove them from pockets to avoid fire, explosion, or death.
- Never style clothes that have been exposed to oil, gasoline, or other flammable substances. Failure to obey this warning can result in fire, explosion, or death.

Choosing Styling method suitable for your items

Item	How to style it
Suit coat, blazer	Moving hanger
Coat, jacket (short)	
Coat (long)	
Dress (short)	Moving hanger after removing shelf
Dress (long)	
Skirt	Moving hanger
Lightweight blanket, throw	
Baby blanket	
Pants (not creased)	
Shorts	
Children's clothes	
Scarf	Moving hanger or shelf
Tie	
Shawl	
Lingerie	Moving hanger or shelf (if delicate)
Shirt, blouse	
Pants (creased)	Pants Crease Care
Cap, hat	Shelf
Stuffed toys	
Pillow	
Sweater	
Knitwear	
Infant clothes	

The Moving Hanger

Hang clothes on the moving hanger using the hangers provided with the appliance, or use any plastic or metal hanger that hooks snugly into the indentations in the moving hanger.

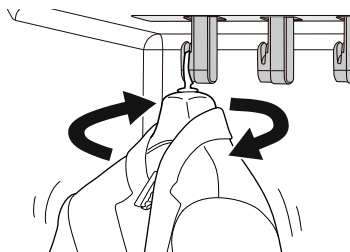

- Use the moving hanger for suits, coats, jackets, blouses, dresses, skirts, and pants that don't require a crease. Use the Pants Crease Care to crease pants.
- Anything that can be securely placed on a hanger and steamed or dried without retaining hanger marks or other damage can be placed on the moving hanger.
- Style sweaters or knits on the shelf to avoid hanger marks.
- Arrange clothing so it does not touch the sides or rear of the cabinet, if possible. Condensation may form on the interior surface of the cabinet, and items in contact with the surface may remain damp at the end of the programme.
- The moving hanger will move even when only the shelf is being used.
- When using an ordinary metal/plastic hanger, the hook should be less than 4 mm thick and the hook must fit in the indentation in the moving hanger snugly. If the fit is too loose, it may result in vibration, noise and damage to clothing.

⚠ CAUTION

- Remove empty hangers from the moving hanger and place them on the shelf before starting the programme. Empty hangers may cause unnecessary noise, friction, and damage to fabrics.
- Do not lean or pull on the moving hanger.
- Hang hangers in the same direction on the moving hanger to prevent collisions.

- Do not allow children to play with or hang onto the moving hanger. The appliance could tip, resulting in damage or injury.

Using the Moving Hanger

- 1 Insert hangers into slots and pull down to secure the hook snugly.
 - Hooks should fit down in the slots snugly to prevent noise, vibration, or damage to items during operation.

NOTE

- Do not overcrowd items. The fewer items, the better the styling performance. Items that touch the sides of the cabinet may pick up condensation from the cabinet and fail to style completely.

Using Hangers

The hangers that come with the appliance are for use with the appliance only. Any plastic or metal hanger that has a hook less than 4 mm thick and hooks snugly into the indentations in the moving hanger can be used in the appliance.


- Do not use hangers with wool, knitwear, or delicate lingerie. The garments may stretch or be left with hanger marks.
 - Wrinkles may appear at the back of the collar on some garments.
 - Remove empty hangers or store them in the shelf during operation.
 - Fasten buttons and zippers on hanging clothes to prevent them from falling off hangers during operation. Fasten the neck area with cotton string if there is no button or zipper.
 - Remove or store the shelf when hanging longer items so items won't get wrinkled.
 - Hang long clothing on the left so that it does not come into contact with the steam nozzle (center).
- 1 Select an appropriate hanger.
 - Choose the appliance hanger that fits the item you are hanging up.

2 Fasten the buttons and zippers on all garments and hang them on hangers.


- Doing so helps keep the garments from falling or becoming more wrinkled during the programme. If a garment has no buttons or zipper, fasten it with a cotton string around the collar area.



hang any clothing on the hanger holder when using a Styler course.

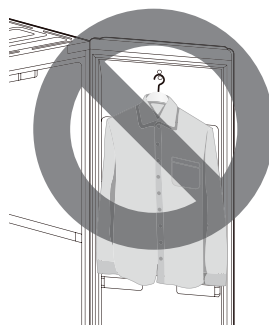

3 Place the hangers into the slots of the moving hanger.

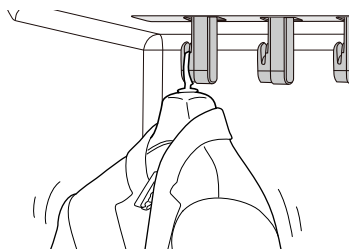

⚠ CAUTION

- The hanger holder inside the door is for the use of the high pressure handy steamer, so do not

The Pants Crease Care

Using the **Pants Crease Care** helps you remove daily wrinkles while maintaining the crease lines on the front and back of your pants.

⚠ CAUTION


- When using the **pants crease care**, open the product door to the end. If not, you may bump into and damage the product when opening and closing the **pants crease care**.
- Do not pull the **pants clips** forcibly. Doing so may damage the product.
- Do not lean on or hang heavy items on the door of the **pants crease care**. The appliance may tip, resulting in damage or injury.
- Do not allow children to play with or hang onto the door of the **pants crease care**. The appliance may tip, resulting in damage or injury.
- Keep fingers out of pinch point areas when closing the door of the **pants crease care**. Supervise nearby children to prevent injuries.

NOTE


- Pants can be pressed while refreshing other items in the same programme.
- For optimum results, use **Pants Press** programme which is designed for use with the

pants crease care feature. This programme can be added using **Edit Cycle List** in **Settings**.


- 1 Open the **pants crease care** by pulling the bottom part.

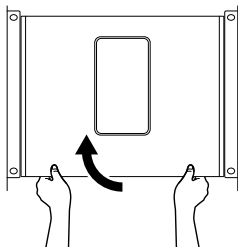


- 2 Open the **pants fastener** ① on the left and right.

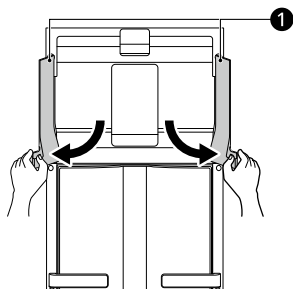

- 3 Push the pants into the **pants fastener holder** ②. Insert the pants into the **pant crease care clip** ③ on the left and right, and pull on both sides of the pants to press out the wrinkles.

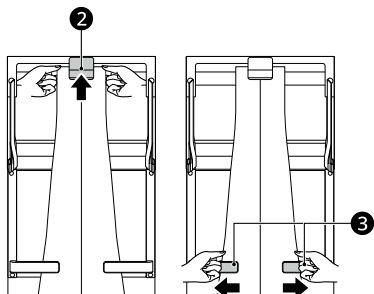

- 4 Close the **pants fastener** on the left and right one by one.
- Closing the **pants fastener** at the same time may create wrinkles on the pants.

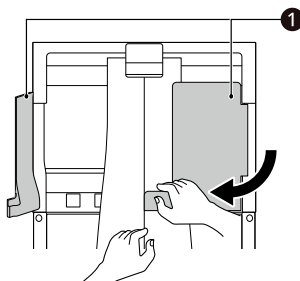

- 5 Close the **pants crease care** door.

NOTE

- The degree of wrinkles removal may vary depending on the type of fabric.
- If you wish to dry pants, hang the pants on the moving hanger.
- The **pants crease care** cannot be used for short clothing such as short pants, so hang such clothing on the moving hanger.
- If the pants pass beyond the gray rubber packing, the pants may become wrinkled or the product may not operate properly. Please check before operating the product.

The Shelf

Use the shelf when styling clothes or other items that are difficult to hang or that may be damaged by hang styling.


⚠ CAUTION

- Do not allow children to climb on or hang on the shelf. The shelf may fall or the appliance may tip, resulting in damage or injury.
- Do not place heavy objects on the shelf or use it to store objects. The shelf may fall, resulting in damage or injury.

NOTE



- Use the shelf for sweaters, knits, lingerie, or delicate blouses that can show hanger marks, stretching, or other damage if dried on a hanger.
- For best styling performance, do not stack items on the shelf. Style single items or place items side by side with space between.
- Marks also may remain on the shelf depending on the type of clothing.
- When not in use, store the shelf on the shelf holder knobs in the door.
- Arrange items on the shelf so they do not touch the sides or rear of the cabinet, if possible. Condensation may form on the interior surface of the cabinet, and items in contact with the surface may remain damp at the end of the programme.

- 2** When styling is completed, hang the shelf on the shelf holder inside the door to store it for next use.

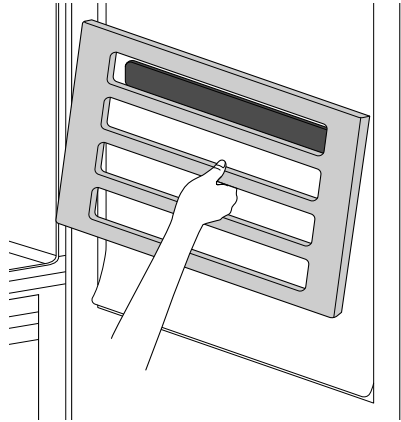


Assembling the Shelf

- 1** Place the grooves on the left and right sides of the shelf **1** on the shelf support **2**.
- If the shelf is not placed properly, it may fall down during product operation and accessories may be damaged.

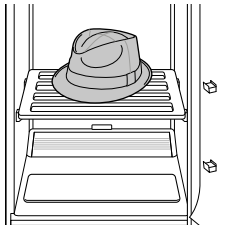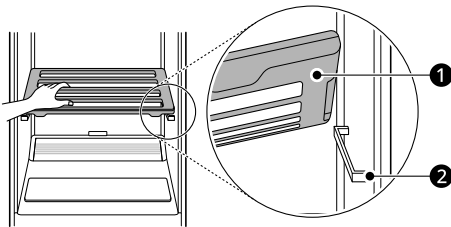

Using the Round Hanger

The round hanger has non-slip pads and a wide shoulder area to help maintain the shape of your clothes. Use it on lightweight and thin clothing, such as knitwear.

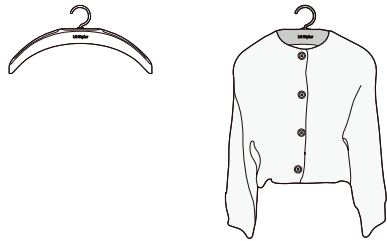


⚠ CAUTION

- Clothing with a collar can wrinkle your collar, so use the styler's basic hanger.

Using the High Pressure Handy Steamer

Control Panel

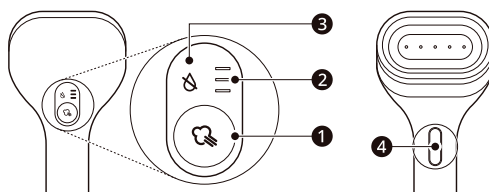

① Steam Mode button

Press and hold down the button for 2 seconds or more to turn on or off the high pressure handy steamer. Pressing the button briefly while the steamer is on changes the steam spraying mode. Adjust the steam mode in the order of **High - Low - Medium**.

② Steam Mode indicator

Indicates the steam mode (**High > Low > Medium**) and the status (**Preparing Steam** or **Steam preparation complete**).

③ Water tank indicator

Indicates if the water supply tank is missing, empty, or full. Check the water supply tank and drain tank before operating.

⚠ CAUTION

- Even if there is water remaining in the water supply tank, a water tank notification may be displayed to ensure the safety of the steam generator.

④ Steam Spraying button

Press the **Steam Spraying** button to spray steam.

Setting the Steam mode

Adjust the steam level in the order of **High - Low - Medium** by pressing the **Steam Mode** button.

- When preparing for steam, the top of the steam mode display window corresponding to each mode blinks. When the steam is ready, a chime sounds and the display window remains on.

	The High mode is suitable for cotton, linen or thick clothing.
	The Medium mode is suitable for general clothing.

32 OPERATION


—

The **Low** mode is suitable for clothing that is vulnerable to moisture.

How to Use the High Pressure Handy Steamer

1 Check the water tanks.

- Fill water supply tank if needed. Empty water drain tank if needed.

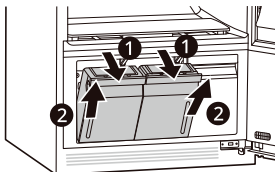


NOTE

- Do not put detergent or fabric softener, or any liquid other than water, into the water supply tank.


2 Close the door and touch the **Power** button.

- If the product door is open, press and hold down the button for 3 seconds or longer.

3 Open the door and secure the shelf.

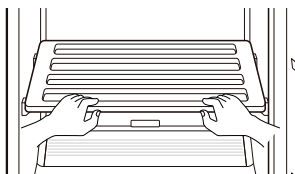

4 Press the steamer case under the appliance and remove the steamer.

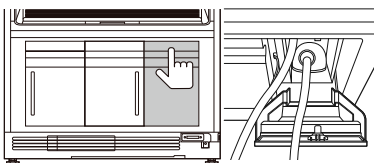

⚠ WARNING


- While using the steamer, do not close the appliance door and the steamer case. Doing so may scratch the edge of the steamer storage box cover, leave scratch marks on the inside of the door, and damage the storage box cover or the steam hose.

5 Press and hold down the **Steam Mode** button for approximately 2 seconds.

- The initial steam mode is set to **High**.

6 Press the Steam Mode button briefly to select the desired steam mode.

- When you press the button, the steam spraying mode will change in the order of **High - Low - Medium**.
- The spray mode display window blinks as follows and prepares for steam for approximately 4 minutes.

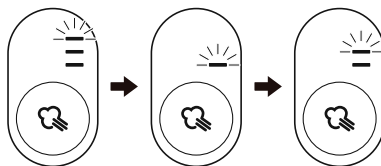


NOTE


- Water is supplied frequently during steam preparation and while using the steamer, and at this time, a noise may occur from the water supply pump. This pump is for high-pressure steam generation, so the water supply noise may be louder.

7 When preparing for steam, using the steamer, or cleaning up after use, place the steamer on

the inside of the shelf as shown in the figure below.

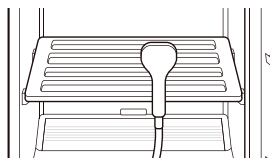


surrounding environment, so spray steam into the air 2-3 times for 2-3 seconds before use.

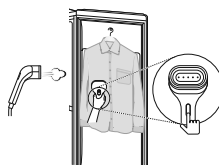

⚠ CAUTION

- Do not place the steamer on the first row of the shelf as it may fall down.

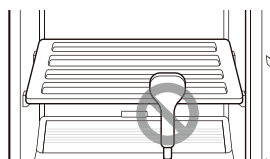


⚠ CAUTION

- There is a risk of burns, so wear the provided **protective glove** on the hand used to grab clothing and use the steamer.
- Spray steam after checking that there is no person or animal around.

- 8 Hang clothing on a hanger, and then hang the hanger on the hanger holder.

- To prevent clothing from falling, use the hanger provided with the appliance and close any buttons or zips.

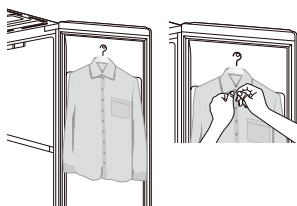

- 9 When the **Steam Mode** indicator stops blinking, it indicates that the steam preparation is finished.

- 10 When steam is sprayed for the first time, condensed water may be sprayed and leave water marks on clothing depending on the

- 11 After using the steamer, press and hold down the **Steam Mode** button for approximately 2 seconds to end the use.

- Place the steamer on the shelf and allow it to cool down sufficiently for approximately 5 minutes or more to remove residual heat.

- 12 Place the steamer in the case.


- Place the steamer head on the insulation pad inside the case and fold the steam hose and place it in the case. For more information, refer to **How to Store the High Pressure Handy Steamer**.

⚠ CAUTION


- After use, wipe any moisture remaining around the steam nozzle and the door with a dry cloth before storing the nozzle.

How to Store the High Pressure Handy Steamer


- 1 Place the steamer head on the insulation pad
① inside the case.

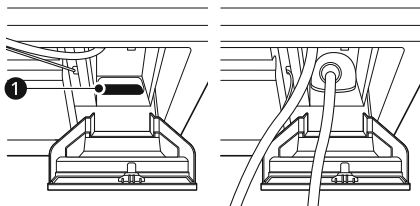


- 2 Hold the end and middle of the steam hose and fold it in half.

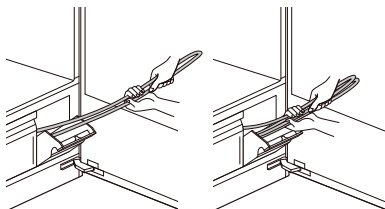

- 3 Fold the steam hose one more time and place it in the case.

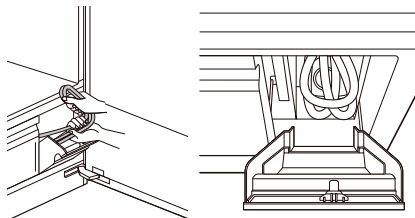


- 4 Close the high pressure handy steamer case cover.

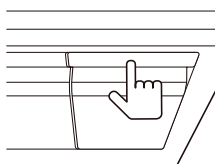

Control Panel

The control panel responds to touch using static electricity. A light touch is enough to operate it. Use a cloth when cleaning the controls to avoid contacting and activating the buttons. Foreign substances on the control, wearing gloves, or touching the buttons through cloth may prevent the buttons from activating.

Control Panel Features

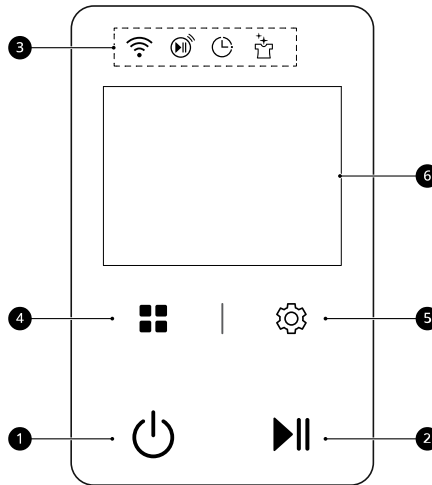

① Power Button

- Press the **Power** button to turn the appliance On/Off. Once the programme is complete, the appliance automatically turns off after a few seconds if no buttons are touched.
- Press and hold down the **Power** button for 1 second or longer to turn off the product during operation.
 - To turn the power on or off while the product door is open, press and hold down the **Power** button for 3 seconds or longer. However, if the handy steamer is on, pressing and holding down the **Power** button for 1 second or longer with the product door open will turn off the product.

NOTE

- Pressing the **Power** button during a programme will cancel that programme and the programme settings will be lost.

② Start/Pause Button





Press and hold to start the selected programme. If the appliance is running, press to pause the programme without losing the current settings.

NOTE

- If the product is paused, the power turns off automatically after a certain time for safety reasons.

③ Alert Indicators

Indicators light up when the **Wi-Fi**, **Remote Start**, **Delay Start** or **Night Care** function is set.

-  : lights up when the appliance is connected to **Wi-Fi** network at home.
-  : lights up when the appliance can be controlled remotely.
-  : lights up when the **Delay Start** feature is set.
-  : lights up when the **Night Care** feature is set.

④ Arrangement Button

Press to show the list of courses in split screens.

⑤ Settings Button

Sets additional options and functions.

⑥ Touch Display

Select a programme or change settings.

NOTE

- Touch buttons may operate without any physical manipulation by responding to static electricity from a human body or a live object near to the buttons.
- Touch buttons may operate by just a light touch with your finger, rather than pressing it forcibly.

Programme Table

The programmes are designed to fit a variety of situations. Select the programme and setting that best match the load contents and desired results for maximum performance and fabric care.

Styling Programme Guide

Default Programmes

These programmes are in the initial cycle list.

Programme	Detail
Normal Refresh	Use it for styling conveniently.
Quick Refresh	Use it for styling less wrinkled or odorous clothing within a short period of time.
Power Refresh	Use it for powerful styling.
Suit/Coat Refresh	Use it for styling a suit or a coat.
Wool/Knitwear Refresh	Use it to keep wool or knitted fabric soft. NOTE <ul style="list-style-type: none"> For thin wool/knitted fabric, the clothing may stretch or leave marks, so use an exclusive hanger or place the clothing on the shelf. The clothing may deform due to its characteristics.
Silk Refresh	Use it for styling silk fabric. NOTE <ul style="list-style-type: none"> Do not use other courses for silk clothing as the fabric may be damaged. Hang long clothing such as a long dress on the left side so that it does not touch the steam outlet (centre). Be sure to button or zip up the clothing to prevent it from sliding down. Due to the nature of the silk material, wrinkles may occur on the stitched part, which is not a damage to clothing.
Cashmere Refresh	Use it for styling cashmere knitwear.
AI Refresh	This is the one item course, and use it for styling on optimal conditions according to the condition of clothing. <ul style="list-style-type: none"> The appropriate operating conditions are set automatically by detecting the weight and length of clothing. Therefore, use it without an empty hanger. The operating time may increase depending on the detection of clothing.

Programme	Detail
Fine Dust Removal	It shakes off fine dust from the clothing.
Normal Sanitary	Use it for hygienic cleaning care of clothing.
Heavy Duty Sanitary	Use it for sanitary sterilization of clothing.
Single Shirt Dry	<p>True Steam is added to this course to reduce wrinkles at the same time while drying the clothing. It will though not eliminate wrinkles completely if they are already present.</p> <ul style="list-style-type: none"> • After washing and spinning, the clothing can be dried using the Styler. <p>NOTE</p> <ul style="list-style-type: none"> • This is the Small Load course that dries clothing while quickly removing wrinkles, and this course is for one clothing item (a shirt or a t-shirt). • Do not use it on clothing made of fabrics that are sensitive to moisture, such as leather or fur, as they may be damaged by Truth Steam.
AI Dry	<p>Use it to dry clothing with optimal conditions according to the status of the clothing.</p> <ul style="list-style-type: none"> • It detects the weight of clothing and sets an appropriate operating conditions by itself.
Indoor Dehumidification	<p>Dehumidifies the room where the appliance is installed.</p> <ul style="list-style-type: none"> • Indoor Dehumidification time can be set to 2 or 4 hours by touching the Settings button. • Notification icon will be displayed with alarm if drain tank is full. Empty drain tank and touch Start/Pause button to continue Indoor Dehumidification. <p>NOTE</p> <ul style="list-style-type: none"> • Empty the drain tank before using the dehumidify course. • It is possible for room temperature to increase due to outgoing airflow from the appliance. • If the surrounding humidity is low, indoor dehumidification may be terminated automatically.

Programme	Detail
Fur/Leather Refresh	<p>Use it for removing moisture and dust from fur or leather, and keeping the volume of fur pressed during storage and daily life.</p> <p>NOTE</p> <ul style="list-style-type: none"> • Follow the care methods recommended by the fur/leather manufacturer. • This course cannot remove contamination and polish at the level of a professional company. • Use only one piece of fur clothing. Otherwise, the fur may clump together. • Use the course after wiping off clothes in the snow or rain once with a dry towel because it can clump together. • To prevent odor from permeating the fabric, operate the Normal Sanitary two to three times before using the Fur/Leather Refresh, add an aroma sheet, and use the course. • Fill up all buttons or zippers and hang them on moving hangers. Clothes may fall off the hanger and get damaged.
Timed Dry	<p>Set a time for washed and dehydrated clothing and use it when you want to dry.</p> <ul style="list-style-type: none"> • It is set to 30 minutes on initial selection, and can be set up to 3 hours by pressing the time setting button.

Non-Default Programmes

Edit the list of programmes using the **Settings - Edit Cycle List** option to use these programmes.

Programme	Detail
Bedding Sanitary	<p>Use it when you want to keep bedding and pillow surfaces clean that cannot be washed often.</p>
Padded Coat Dry	<p>Use it for drying the padded coat and keeping the volume of it, after washing and dehydrating.</p> <p>NOTE</p> <ul style="list-style-type: none"> • Dry without complete rinsing and dehydration may leave detergent and cause stains or odors on clothing after drying. • Use only one padded coat at a time. • Down jackets may lose volume after the course ends, with feathers clumping inside your clothes. Tap your clothes with palms or empty plastic bottles to bring volume to life.

Programme	Detail
Padded Coat Refresh	Use it for giving volume to the padding and making it soft. NOTE <ul style="list-style-type: none"> • Adding multiple bulky padding can degrade drying performance. Add just one pair and use it.
Yoga Wear Dry	Use it for drying yoga/pilates clothes that have been washed and dehydrated.
Delicate Low-Temperature Dry	Use it for drying clothes at low temperatures without damage that are washed and dehydrated. NOTE <ul style="list-style-type: none"> • Do not use hangers, but place them on shelves to use them, as clothes may stretch or leave marks after washing.
Night Care Refresh	Use it for storing clothes optimally before wearing it.
School Uniform Refresh	Use it for refreshing the school uniform neatly by reducing the wrinkles of your school uniform, which is difficult to wash every day.
Sportswear Refresh	Use it for keeping sports clothing such as golf clothing and windbreakers fresh.
Rain/Snow Dry	Use it for drying clothes that have become slightly wet and soggy when it snows or rains.
Warm Blankets	Used for warming up blanket in winter and use it when you want to cover it snugly. NOTE <ul style="list-style-type: none"> • Place the blanket on the shelf or hang it on a hanger to keep it from falling with tongs, etc., and operate the product.
Scarf Refresh	Use it for removing the smell from the scarf and making it fresh to keep or use the scarf. NOTE <ul style="list-style-type: none"> • Place the scarf on the shelf or hang it on a hanger to keep it from falling with tongs, etc., and operate the product.
Swimwear Dry	Use it for drying swimsuit without damage.
Baby Clothes Sanitary	Used for taking care of baby clothes hygienically. NOTE <ul style="list-style-type: none"> • Use of Sanitary programmes on fabrics that require delicate care, such as fur/leather, cashmere/wool, chiffon and linen, can damage the fabric.

Programme	Detail
<p>Old Clothes Refresh</p>	<p>Use it for refreshing the clothes that are stored for a long time and smell soggy and unpleasant.</p> <p>NOTE</p> <ul style="list-style-type: none"> • Use it before storing clothes in-between seasons or before displaying them in your closet will keep your wardrobe comfortable.
<p>Warm Overcoats</p>	<p>Use it for warming up coat, gloves, and scarf when going out in winter.</p>
<p>Yoga Wear Refresh</p>	<p>Use it for keeping yoga or pilates clothing fresh.</p>
<p>Wool/Knitwear Dry</p>	<p>Use it for drying clothes with the feeling of delicate fabric such as wool/knit clothing.</p> <p>NOTE</p> <ul style="list-style-type: none"> • Do not use hangers, but place them on shelves to use them, as clothes may stretch or leave marks after washing. • Depending on the material of the garment, the garment may be reduced.
<p>Doll Sanitary</p>	<p>Use it for taking care of dolls hygienically.</p> <p>NOTE</p> <ul style="list-style-type: none"> • Use of Sanitary programmes on fabrics that require delicate care, such as fur/leather, cashmere/wool, chiffon and linen, can damage the fabric.
<p>Rainy Days Dry</p>	<p>Use it for drying laundry during the rainy season.</p>
<p>Suit/School Uniform Sanitary</p>	<p>Use it for keeping the suits and uniforms hygienic that cannot be washed or dry cleaned every day.</p>
<p>Static Removal</p>	<p>Use it before wearing clothes that are prone to static electricity in winter, such as coats and sweaters.</p>
<p>Silent Refresh</p>	<p>Use it late at night or early in the morning when you want to style it quietly.</p> <p>NOTE</p> <ul style="list-style-type: none"> • It may take longer than standard styling.
<p>Jeans Refresh</p>	<p>Use it for refreshing clothes that are likely to cause stains or fade if you wash them often, like jeans.</p> <p>NOTE</p> <ul style="list-style-type: none"> • Dyes that are missing from jeans may be colored on the wall or floor of the product, so hang them on moving hangers using hanger tongs.

Programme	Detail
Knitted Cardigan Refresh	Use it for it refresh knitted cardigan by hanging it on a round hanger. NOTE <ul style="list-style-type: none"> • When operating the Knitted Cardigan Refresh, be careful that using a styler regular hanger may deform your clothes. • Place unlined knitwear or thick, heavy sweaters on a rack to use the course. Using hangers can leave marks or stretch clothes down due to moisture. • Do not use a washed/dehydrated knit cardigan.
Pants Crease Care	Use it for reducing wrinkles in pants and creasing pants again by putting pants in Pants Crease Care .

CAUTION

- Follow the care instructions recommended by the fur/leather manufacturer. Failure to do so may cause the fur to be compressed.
- If clothing is snow- or rain-soaked, wipe clothing with a dry towel and then use a course. Otherwise, the fur may clump together.
- Jeans may fade, so pick them up with pegs and hang them on a moving hanger.
- Use an exclusive course for delicate clothing that can be damaged by steam (e.g. fur/leather, cashmere/wool, chiffon, linen, etc).

NOTE

- Check **Fabric Care Guide** in this manual and fabric care labels on garment before styling.
- Wrinkles may remain in some items. Wrinkles caused by extended storage may be difficult to reduce. Wrinkles in cotton or linen may not be reduced or removed completely. Iron after styling, if desired.
- Some odours can be difficult to remove. Odours from oily substances may be difficult for the steam to penetrate. Odours from extended storage may also be difficult to remove.
- Programme times may vary depending on the usage environment, including water temperature.
- Very thick clothing may not be dried uniformly at the end of the programme.
- Styling times for the programme may be longer for wet clothes that are not spin dried.

Wrinkle Care

The appliance utilizes high temperature steam and moving hangers to reduce wrinkles without damaging the garment. It cannot remove wrinkles completely if they are hard set and the clothing fibers are not soft.

Wrinkle Care Performance Comparison Styler

The appliance uses steam to indirectly iron, wrinkled clothing may not be fully free of creases after cycle. There may be a difference in wrinkle care performance and reduction results depending on the weight and material of the cloth.



	Wrinkle Reduction Level
①	Styler
A	Before ironing
B	Steam iron
C	Press iron

Fabric Care Guide

Fabric & Clothes	Programme			
	Refresh		Sanitary	Dry
	Wrinkles	Odours		
Cotton Towels, socks, underwear, jeans, sportswear, T-shirts, blankets		●	●	●
Linen, hemp, ramie Summer clothes, tablecloths		●	●	●
Alpaca, camel hair, cashmere Coats, suits	●*1	●*1	●*1	●*1
Scarves, knitwear		●*1		●
Fur, leather Coats, scarves	<ul style="list-style-type: none"> Style the fur, leather clothes using a Fur/Leather Refresh programme. But leather is only 100% natural leather (No artificial leather) 			
Silk Neckties, ribbons, scarves, blouses, silk velvet/plush	<ul style="list-style-type: none"> Only use downloaded Silk Refresh programme (low temperature drying). 			
Wool Sweaters, knitwear		●*1		●
Winter coats, suits, sportswear, uniforms	●	●	●	●

Fabric & Clothes	Programme			
	Refresh		Sanitary	Dry
	Wrinkles	Odours		
Acetate Suit lining, blouses, neckties, pajamas	●	●	●	●
Acrylic Thermal underwear, knitwear	●	●	●	●
Nylon Stockings, lingerie, sportswear, curtains	●	●	●	●
Polyurethane (less than 5%) Stretchable clothing	●	●	●	●
Rayon Suit Lining	●	●	●	●

*1 Check fabric care labels in garments before use.

NOTE

- Fabrics come in a wide variety of weights and finishes and can have different care requirements for each variety. It is difficult to cover them adequately in this manual. Before using the appliance with any item, check the care label before proceeding.
- Do not put items that are not colour fast, are heat-sensitive, or are not suitable for washing with water in the **Refresh** or **Sanitary** programmes. Do a water blot test on a small, inconspicuous spot (an inside seam) to determine if the fabric is colour fast. For further assistance, consult the clothing manufacturer, a dry cleaning professional, or a more detailed fabric care guide.
- Using the appliance with items that are very wet or are not colourfast may result in damage to the items and staining from fabric dyes on the interior of the cabinet. These stains will not affect the operation of the appliance. Use toothpaste to remove stains from interior of cabinet.
- The appliance does not have a washing function. Wash soiled items before use.

Settings

Option Programmes and Extra Functions

1 Touch the **Settings** button.

2 Touch the desired option or function.

Delay Start

Use this function to delay the start time of the programme.

- To cancel reservation, press the **Delay Start** button and select **Cancel Delay Start**.

NOTE

- Reservations can be made every an hour from 3 to 19 hours, and reservations are not made for less than 3 hours.
- If you change the course after setting **Delay Start**, it will be deactivated.

Night Care

Use this function to store items overnight or anytime items can't be removed soon after a cycle ends. The function periodically produces warm air to prevent condensation, keeping items warm and dry until they are removed.

1 Touch **Power** button.

2 Choose a desired programme.

3 Touch the **Settings** button.

4 Touch **Night Care** button.

5 Touch and hold **Start/Pause** button for 1 second or longer.

- While the **Night Care** function is running, when you touch the **Power** button or open

the door, the **Night Care** function will be deactivated.

NOTE

- Some noise occurs periodically to produce warm air. This is normal.

Control Lock

Use this function to prevent unwanted use of the appliance or to keep programme settings from being changed while the appliance is operating.

- When the controls are locked, "**Control Lock is ON.**" is displayed on touch display. When other buttons are touched before "**Control Lock is ON.**" is displayed, the function will not be activated.

Deactivating the Control Lock function

1 When you touch the screen or **Start/Pause**, **Settings** or **Arrangement** button while locked, the button unlock screen will appear.

2 Touch the  icon for 3 seconds.

NOTE

- The function does not lock the door.
- The function is retained even if there is a power outage.
- Once set, the function remains active until it is manually deactivated. The function must be deactivated to run another programme.

Remote Start

With the **LG ThinQ** app, you can use a smartphone to control your appliance remotely.

- In order to use the **Remote Start** function, refer to **SMART FUNCTIONS**.

Wi-Fi

Use to set up the Wi-Fi connection. When Wi-Fi is turned on, the Wi-Fi icon appears in the display.

Auto Cycle Arrangement

When activated, this feature organizes the programme list and options automatically based on your usage patterns.

- **On** is the default setting.
- Selecting **Off** retains the current list order.

Edit Cycle List

Edit the list of programmes as desired.

- 1 Touch **Edit Cycle list** and add or delete the desired course.
 - You can browse the list of courses by swiping the screen up and down.
 - When swiping the screen up and down and keeping your finger on the screen, the list of courses will be browsed quickly.
 - When a course is added to the course list, a check mark on the selected course will be enabled.
 - When a course is deleted from the course list, a check mark on the selected course will be disabled.
- 2 After selecting the programme, press the **⏪(Previous)** button to save it.

NOTE

- **Normal Refresh, AI Refresh, Power Refresh, Normal Sanitary, Single Shirt Dry** and **AI Dry** courses cannot be deleted from the list of courses.
- The order in the course list can be changed according to the user edit from the **Auto Cycle Arrangement** function and the **LG ThinQ** app.

AI Cycle Recommendation

An appropriate course is recommended according to weather and fine dust status.

Steamer Cleaning

Use this function to remove foreign matters such as limestone inside the steam generator.

- 1 Check the water tanks.
 - Fill water supply tank if needed. Empty water drain tank if needed.

⚠ CAUTION

- Only use water when filling the water supply tank. Any other substance, such as detergent or fabric softener, may damage the appliance.

- 2 Close the door and touch the **Power** button.
 - When the product door is open, press and hold down the button for 3 seconds or longer.
- 3 Touch the **Settings** button.
- 4 When is **Steamer Cleaning** pressed, cleaning the steam generator will begin.
 - Steamer cleaning will be executed for approximately 3 minutes.
 - After cleaning ends, water used for cleaning will be drained into the water drain tank.

Signal

The volume of the notification sounds and button sounds can be set from quiet to very loud.

- Default volume is **Very Loud** and can be adjusted.
 - Volume : **No Sound, Quiet, Normal, Loud, Very Loud**

Reset Settings

Select this to delete all the stored data and reset to factory default settings.

SMART FUNCTIONS

LG ThinQ Application

The **LG ThinQ** application allows you to communicate with the appliance using a smartphone.

LG ThinQ Application Features

Communicate with the appliance from a smartphone using the convenient smart features.

Push Alerts

When the programme is complete or the appliance has problems, you have the option of receiving push notifications on a smartphone. The notifications are triggered even if the **LG ThinQ** application is off.

Smart Diagnosis

This function provides useful information for diagnosing and solving issues with the appliance based on the pattern of use.

Energy Monitoring

This function checks the energy consumption of the recently used programme and monthly average.

Settings

Allows you to set various options on the appliance and in the application.

NOTE


- In the following cases, you must update the network information for each appliance in the **LG ThinQ** application under **Device Cards** → **Settings** → **Change Network**.
 - wireless router is changed
 - wireless router password is changed
 - Internet service provider is changed
- The application is subject to change for appliance improvement purposes without notice to users.

- Functions may vary by model.

Installing LG ThinQ App and Connecting an LG Appliance

Models with QR Code


Scan the QR code attached to the product using the camera or a QR code reader app on your smartphone.

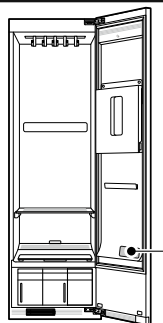

Models without QR Code

- 1 Search for and install the **LG ThinQ** app from the Google Play Store or Apple App Store on a smartphone.
- 2 Run the **LG ThinQ** app and sign in with your existing account or create an LG account to sign in.
- 3 Touch the add (+) button on the **LG ThinQ** app to connect your LG appliance. Follow the instructions in the app to complete the process.

NOTE

- You may be asked to provide a password to connect to the LG network (not your home network) during the Wi-Fi setup. The password is the last 4 characters of the network name, repeated twice, with no spaces. For example, if the network name appears as LG_XXXX_8b92, then you would enter 8b928b92 as your password. The password is case sensitive and the last 4 characters are unique to your appliance.
- To verify the Wi-Fi connection, check that the  icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- **LG ThinQ** is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- If the appliance cannot be connected due to problems with the wireless signal transmission, unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to **WEP**, network setup may fail. Change the

security protocol (**WPA2** is recommended) and connect the product again.

Using the Appliance Remotely

Use a smartphone to control the appliance remotely. You can also monitor the programme operation so you know how much time is left in the programme.

Using Remote Start

- 1 Put the clothes into the appliance.
- 2 Press the **Power** button.
- 3 Press the **Settings** button.
- 4 Press the **Remote Start** button to use the appliance remotely.
- 5 Start a programme from the **LG ThinQ** application on your smartphone.

NOTE

- Once the function is enabled, you can only start a programme from the **LG ThinQ** smartphone application. If the programme is not started, the appliance will wait to start the programme until it is turned off remotely from the application or this function is disabled.
- If the door has been opened, you cannot start a programme remotely.

Disabling Remote Start Manually

When the function is activated, touch the **Remote Start** button to disable the function.

Download programme

You can download new and specialized programmes that are not included in the standard programmes on the appliance.

Appliances that have been successfully connected to a Wi-Fi network can download a variety of specialty programmes specific to the appliance.

Various courses can be used through **Settings - Edit Cycle List**.

Radio Equipment Specifications

Type	Operating Frequency Range	Output Power (Max.)
Wireless LAN	2400 MHz - 2483.5 MHz	< 100 mW
Bluetooth*1		

*1 This feature is only available on some models.

Wireless function S/W version: V 1.0

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

Smart Diagnosis

Use this feature to help you diagnose and solve problems with your appliance.

NOTE

- For reasons not attributable to LGE's negligence, the service may not operate due to external factors such as, but not limited to, Wi-Fi unavailability, Wi-Fi disconnection, local app store policy, or app unavailability.
- The feature may be subject to change without prior notice and may have a different form depending on where you are located.

Using LG ThinQ to Diagnose Issues

If you experience a problem with your Wi-Fi equipped appliance, it can transmit troubleshooting data to a smartphone using the **LG ThinQ** application.

- Launch the **LG ThinQ** application and select the **Smart Diagnosis** feature in the menu. Follow the instructions provided in the **LG ThinQ** application.

MAINTENANCE

⚠ WARNING

- Unplug the appliance before cleaning to avoid the risk of electric shock. Failure to follow this warning can cause serious injury, fire, electrical shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the appliance. They will damage the finish.

Regular Cleaning

Cleaning the Interior and Exterior

Proper care of your appliance can extend its life. When operating the product, use the moving hanger to remove dust from clothing. Since steam is used, dust and moisture may remain inside the product after product operation. Wipe the inside of the product to keep it clean.

- 1 Clean the inside and outside of the appliance with a damp absorbent cloth.
 - Glass cleaner can be used to clean the front glass panel, but spray it sparingly on a cloth and wipe rather than spraying it directly on the panel.
- 2 Buff the door dry with a clean, dry absorbent cloth to prevent any water stains.
- 3 Allow the interior and exterior to dry completely before plugging in and operating the appliance.

⚠ CAUTION

- Do not spray water directly on the appliance.
- Do not use detergent, methylated spirits, solvents, or any volatile liquids to clean the exterior of the appliance.
- Never use steel wool or abrasive cleansers; they can damage the surface.


- Keep sharp objects away from the exterior of the appliance. The touch panel may not work if damaged.

Cleaning the Lint Filter


Always remove the lint from the filter after every programme. If the lint filter has become very dirty or clogged, wash the lint filter in warm, soapy water and allow it to dry thoroughly before reinstalling.

- Never operate the appliance without the lint filter.
- Never operate the appliance with a wet lint filter.

- 1 Remove the lint filter cover and lint filter.
- 2 Clean off large areas of lint first using your fingers. Then clean off the residual lint using a vacuum cleaner or soft brush.
 - If the lint filter is torn or damaged, replace it with a new one.

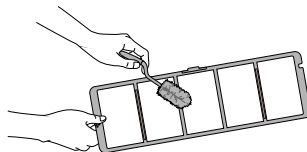

- 3 After drying the filter completely, insert the lint filter ② and lint filter cover ①.

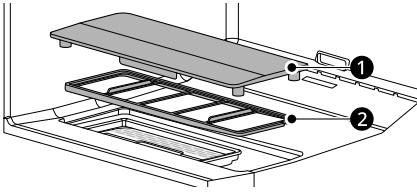

- 3 When cleaning is completed, reinstall the lint filter cover on top of the lint filter correctly.
- Install the lint filter cover so that the arrow (▽) points to the front of the appliance.


Cleaning the LED Lighting Case

The lighting case only requires maintenance if water is poured into the product or wet clothing such as swimsuits drip water into the air passage below the lint filter.


Cleaning the Mirror Surface on the Lint Filter Cover

Clean the appliance regularly to keep it operating properly.

- 1 Remove the lint filter cover and lint filter.


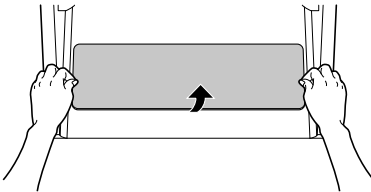


- 1 Remove the lint filter cover and lint filter.
- 2 Wipe off the top surface of the LED lighting case using a cotton swab.

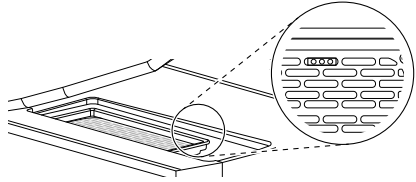


- 2 Wipe the mirror surface on the back of the lint filter cover with a soft dry towel.

- If the mirror surface is excessively scratched or damaged, replace it with a new one.
- If the mirror surface is not kept clean, there may be a restriction in the functions using the smart lighting sensor.

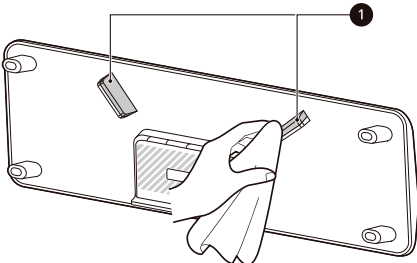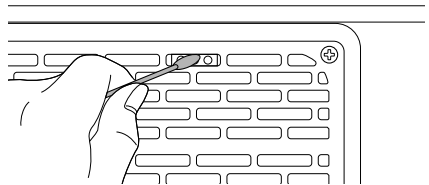


Cleaning Dehumidification Filter

- 1 Take out the dehumidification filter.

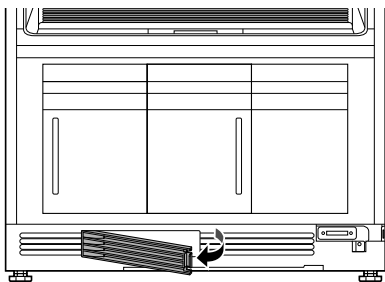

- 2 Wipe off the filter with a soft brush or vacuum it.

 - If the filter is torn or damaged, replace it with a new one.



- 3 When cleaning is complete, dry the filter off completely and install it correctly.

NOTE

- Remember to assemble the filter after cleaning it. Foreign substances may enter the product if the product is operated without a filter.

Cleaning the Aroma Filter

For best results, wash the aroma filter using hot water and dish soap. After cleaning, wipe the filter with a clean cloth and allow it to dry thoroughly before reinstalling it.

The aroma filter can also be cleaned in the top rack of the dishwasher.

- Never operate the appliance without the aroma filter.


- Never operate the appliance with a wet aroma filter.

Cleaning the Water Tanks


The water in the water supply tank contacts the clothing and items treated in the appliance directly. Clean both tanks periodically and keep them clean at all times. If the tanks are not properly cleaned, they may start to smell or need to be replaced.

- Some discolouration of the water drain tank may occur over time. This is normal and will not affect product performance.
- Use only clean tap water in the supply tank for best performance and to prolong the life of the appliance. Do not use distilled water.
- Do not reuse the water from the water drain tank in the water supply tank.


- 1 Pull the handle of the tank forward and then take the tanks out of the appliance.

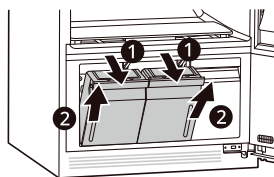

- 2 Please clean the inside of the water tanks with water by using a brush cleaning the water tanks.

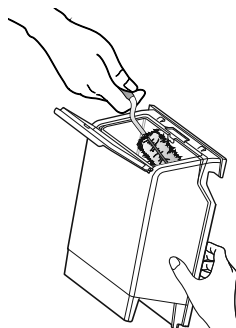

- 3** Make sure the drainage nozzle **4** connected to the water drain tank and the water supply hole **3** connected to the water supply tank are not clogged.

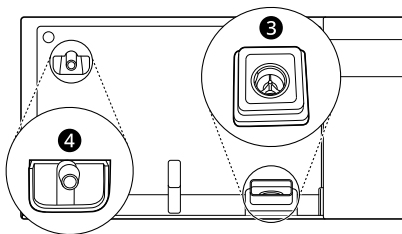

- 4** Allow the outsides of the tanks to dry completely before reinstalling the tanks.

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to LG Electronics service centre.

Before Calling for Service

Your appliance is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If your appliance does not function properly or does not function at all, check the following before you call for service.

Error Messages

Symptoms	Possible Cause & Solution
Check the water tank	Water supply tank is empty or tank is missing. <ul style="list-style-type: none"> Fill the water supply tank and reinstall it.
	Water drain tank is full or tank is missing. <ul style="list-style-type: none"> Empty the water drain tank and reinstall it.
Fill the water supply tank	Water supply tank is empty or tank is missing. <ul style="list-style-type: none"> Fill the water supply tank and reinstall it. If the error is not released, call for service.
Empty the water drain tank	Water drain tank is full or tank is missing. <ul style="list-style-type: none"> Empty the water drain tank and reinstall it. If the error is not released, call for service.
The door is open. Close the door completely	Door is not completely closed. <ul style="list-style-type: none"> Check that items are completely inside the cabinet and that the door is tightly closed.
Lint filter mounting error	Lint filter is missing. <ul style="list-style-type: none"> Install the lint filter in place.
	Water has gotten inside the appliance from wet clothing or pouring water inside. <ul style="list-style-type: none"> If water enters the air passage below the lint filter, it may affect product operation. Remove the lint filter cover and lint filter, drain any visible moisture, allow to dry completely, and then use the product again.
Clothes falling detected.	Clothing fell on the bottom of the appliance. <ul style="list-style-type: none"> Hang clothing back on the hanger. Close the buttons and zips on the clothing to prevent it from falling off during operation. For clothing with no buttons or zips, use a string to secure it.

Symptoms	Possible Cause & Solution
Light Sensor Error Flow Control Unit Error Exhaust Fan Error Temperature Sensor Error Steam Heater Error Compressor Error Moving Hanger Error Steamer Steam Heater Overheating Error Steamer Steam Heater Disconnection Error Steamer Handy Heater Disconnection Error Water supply issue on the Steamer Steamer drainage failed	System error. <ul style="list-style-type: none"> Unplug the appliance and call for service.

Operation

Symptoms	Possible Cause & Solution
The appliance won't operate.	Control panel has powered off due to inactivity. <ul style="list-style-type: none"> This is normal. Touch the Power button to turn the appliance on.
	Cord is unplugged. <ul style="list-style-type: none"> Make sure the cord is plugged securely into a working outlet.
	Circuit breaker/fuse is tripped/blown. <ul style="list-style-type: none"> Check house circuit breakers/fuses. Replace fuses or reset breaker. The appliance should be on a dedicated branch circuit.
	Appliance is not connected to 220-240 V socket. <ul style="list-style-type: none"> Make sure the cord is plugged into a grounded socket rated for this appliance.
The programme won't start.	Start/Pause button was not touched after the programme was set. <ul style="list-style-type: none"> Touch the Start/Pause button.
	Programme is producing steam. <ul style="list-style-type: none"> There may be a period of inactivity while steam is produced.
	Control panel is locked. <ul style="list-style-type: none"> Disable the locking of the control panel and touch the Start/Pause button.

Symptoms	Possible Cause & Solution
The programme won't start.	<p>Detergent or fabric softener put in water supply tank.</p> <ul style="list-style-type: none"> Do not use anything but clean water in the water supply tank. If the appliance don't operate, call for service.
Steam or hot air comes out when the door is opened.	<p>Door is opened during operation.</p> <ul style="list-style-type: none"> It is normal for steam or hot air to escape if the door is opened during operation.
	<p>An item is caught in the door, keeping it slightly open.</p> <ul style="list-style-type: none"> Make sure all items are completely inside the cabinet and nothing is caught in the door, blocking it from closing completely.
Full water supply tank is empty after just one use.	<p>Appliance is being used for the first time.</p> <ul style="list-style-type: none"> A larger amount of water is needed the first time the appliance is used to fill the empty reservoir.
Appliance makes a loud vibrating noise on startup.	<p>Moving hanger is balancing load before operation.</p> <ul style="list-style-type: none"> This is normal at the beginning of the programme. If the noise increases or continues for a long time, call for service.
Styling times are taking longer than estimated.	<p>Clothes were extremely wet when loaded.</p> <ul style="list-style-type: none"> Styling times may be longer for very wet or bulky clothing. Damp dry clothes before putting them in the appliance. The appliance stops automatically when clothes are dry.
Appliance is moving from left to right while operating.	<p>Floor under appliance is not level or is not sturdy enough to support the weight of the appliance without flexing.</p> <ul style="list-style-type: none"> Install the appliance where the floor is level and sturdy. Compensate for any slight unevenness in the floor with the leveling legs.
Sound of motor whirring.	<p>Compressor is running during styling.</p> <ul style="list-style-type: none"> This is normal.
Sound of water running, boiling, or hissing.	<p>Steam is being generated and sprayed onto clothes.</p> <ul style="list-style-type: none"> This is normal.
Steam or hot air leaks out when the door is closed.	<p>An item is caught in the door, keeping it slightly open.</p> <ul style="list-style-type: none"> Make sure all items are completely inside the cabinet and nothing is caught in the door, blocking it from closing completely.
Control panel won't respond.	<p>Control panel or button has dirt on it.</p> <ul style="list-style-type: none"> Dirt or foreign objects on the control panel will interfere with the operation of the buttons. Clean the control panel.
	<p>Control panel is locked.</p> <ul style="list-style-type: none"> Disable the locking of the control panel. (See Control Lock for instructions.)

Performance

Symptoms	Possible Cause & Solution
Clothes are wet at the end of the programme.	Filter is clogged. <ul style="list-style-type: none"> • Clean the lint filter.
	Door gasket is damaged. <ul style="list-style-type: none"> • If the rubber door gasket is damaged, it leaves a gap in the door seal, affecting performance of the appliance. Call for service.
	Clothes caught in door. <ul style="list-style-type: none"> • Make sure all items are completely in the cabinet and not stuck in the door, blocking it from closing completely. Run the programme again.
Odour is not removed at end of programme.	Clothes were stored for a long period of time or are stained with a strong-smelling substance. <ul style="list-style-type: none"> • Odours can be particularly difficult to remove from clothes that have been stored for long periods or have strong-smelling, oily stains. Wash the clothes first, before using the appliance.
Wrinkles are not reduced at end of programme.	Clothes were stored for a long period of time. <ul style="list-style-type: none"> • Wrinkles may be very difficult to reduce if set for a long time, especially in cotton and linen fabrics. Iron clothes that have been stored for a long period of time before treating them with the appliance, to reduce wrinkles more effectively. The appliance cannot remove wrinkles completely.
Clothes have an unpleasant odour at end of programme.	Appliance has not been used for a long time or water tanks and filters have not been cleaned. <ul style="list-style-type: none"> • Check for dirt or foreign objects in the water supply and water drain tanks. Clean the filters and water tanks.
	Are you using the appliance for the first time? <ul style="list-style-type: none"> • The smell is caused by rubber material that is attached to the appliance inside. This kind of smell is a rubber's own smell and disappears automatically after using the appliance several times.
Functions are not operating properly.	Detergent or fabric softener put in water supply tank. <ul style="list-style-type: none"> • Do not use anything but clean water in the water supply tank.
Wrinkles at back of neck after programme.	Item too large for hanger or fabric too delicate. <ul style="list-style-type: none"> • Use the right size hanger for the item so the fabric won't bunch up and cause wrinkles. Some fabrics are delicate and will bunch around the hanger no matter what you do. Use the shelf for lingerie and other delicate items.
Creases are gone from pants after programme.	Pants were hung on the moving hanger, not in the Pants Crease Care. <ul style="list-style-type: none"> • Hang pants in the Pants Crease Care to maintain creases at edge of pants legs.

Symptoms	Possible Cause & Solution
Clothing has water spots after programme, colour has faded or run.	<p>Fabric is not washable, or is not colourfast.</p> <ul style="list-style-type: none"> • Check fabric care labels before treating items.

Wi-Fi

Symptoms	Possible Cause & Solution
Your home appliance and smartphone is not connected to the Wi-Fi network.	<p>The password for the Wi-Fi that you are trying to connect to is incorrect.</p> <ul style="list-style-type: none"> • Find the Wi-Fi network connected to your smartphone and remove it, then register your appliance on LG ThinQ.
	<p>Mobile data for your smartphone is turned on.</p> <ul style="list-style-type: none"> • Turn off the Mobile data of your smartphone and register the appliance using the Wi-Fi network.
	<p>The wireless network name (SSID) is set incorrectly.</p> <ul style="list-style-type: none"> • The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
	<p>The router frequency is not 2.4 GHz.</p> <ul style="list-style-type: none"> • Only a 2.4 GHz router frequency is supported. Set the wireless router to 2.4 GHz and connect the appliance to the wireless router. To check the router frequency, check with your Internet service provider or the router manufacturer.
	<p>The distance between the appliance and the router is too far.</p> <ul style="list-style-type: none"> • If the distance between the appliance and the router is too far, the signal may be weak and the connection may not be configured correctly. Move the location of the router so that it is closer to the appliance.

