



QUICK START GUIDE

WINE CELLAR COLUMN QUICK START GUIDE

Scan QR code
to learn more



OPERATING INSTRUCTIONS

WARNING :


To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance’s Owner’s Manual, before operating this appliance.

IMPORTANT:

Before operating this appliance, make sure it has been properly installed according to the appliance’s Owner’s Manual.

The Temperature Control UI is located at the center of the shelves, dividing upper and lower compartment.

TEMPERATURE CONTROL UI

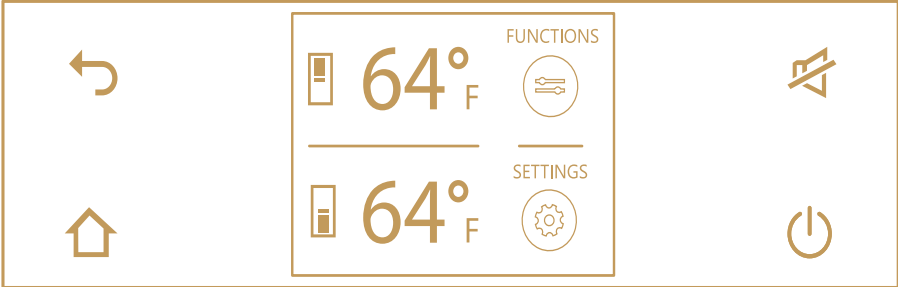

	Turning ON/OFF Touch the icon to turn the unit ON or OFF.
	Home Touch the Home icon to go back to the home screen.
	Alarm Touch the icon to view the alarm tone functions and to deactivate them.
	Back Touch the arrow icon to go back to the previous screen.

IMPORTANT:

- The display shows the main screen with the ambient temperature measured from the wine cellar inside the compartments.
- When the appliance is first switched on, it is recommended to wait at least 12 hours before placing any wine inside the unit.
- During the first startup, it will not be possible to use the Menu to modify the factory settings until the preset temperature has been reached.

TEMPERATURE SETS POINTS

Refer to the Owner’s Manual for information about adjusting upper and lower compartment temperatures.

COMPARTMENT	TEMPERATURE RANGE
Upper storage area	+4°C (39°F) to +18°C (64°F)
Lower storage area	+4°C (39°F) to +18°C (64°F)

TYPE OF WINE	CONSERVATION TEMPERATURE	TIME OF CONSERVATION
New wines (Vin Nouveau)	from 12°C (54°F) to 14°C (57°F)	6 months
Sweet sparkling wines	from 8°C (46°F) to 10°C (50°F)	1 year
Rose	from 10°C (50°F) to 14°C (57°F)	1 year
Semi-sparkling wines	from 10°C (50°F) to 12°C (54°F)	1-2 years
Normal white wines	from 10°C (50°F) to 14°C (57°F)	1-2 years
Light red wines	from 12°C (54°F) to 14°C (57°F)	2 years
Dry sparkling wines	from 8°C (46°F) to 10°C (50°F)	2 years
Classic sparkling wines	from 8°C (46°F) to 10°C (50°F)	3-4 years
Barrique and Vigorous white	from 8°C (46°F) to 12°C (54°F)	3-5 years
Normal red wines	from 14°C (57°F) to 16°C (61°F)	3-5 years
Barrique and Vigorous red	from 14°C (57°F) to 18°C (64°F)	7-10 years
Straw wines or Liqueurous	from 16°C (61°F) to 18°C (64°F)	10-15 years

AMBRA LIGHT ON/OFF

When this function is turned on, the lights inside the wine cellar column stay on even when the door is closed. When the door is open, the lights are white to maximize visibility; when the door is closed, the wine cellar will illuminate with amber colored light. The long wave length of amber colored light helps filter out the shorter wave length of UV light, aiding in wine preservation.

To turn ON/OFF Ambra Lighting:

- ① Touch the functions menu on UI.
- ② Touch AMBRA LIGHT ON/OFF option to turn ON/OFF the ambra lighting.

SETTINGS

It is possible to personalize the settings of your wine cellar column for adapting it to the different ways you might want to use it. For more details about the personalization setting options refer to the Owner’s Manual.

DATE 	TIME 	°C / °F 	RESET
DEMO MODE 	FUNCTIONS 	SETTINGS 	AMBRA LIGHT OFF
AMBRA LIGHT ON 	INFO SYSTEM 	SERVICE 	LANGUAGE

ONLINE ORDERING INFORMATION

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner’s Manual included with your appliance.


For information on any of the following items, the full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit www.jennair.com/create-account, or in Canada www.jennair.ca/owners. This may save you the cost of a service call. However, if you need to contact us, use the information listed below for the appropriate region.

United States:
1-800-JennAir (536-6247)

JennAir Appliances
Customer eXperience Center
553 Benson Road
Benton Harbor, MI 49022–2696

Canada:
1-800-536-6247

JennAir Appliances
Customer eXperience Center
Whirlpool Canada
200–6750 Century Ave.
Mississauga, Ontario L5N 0B7

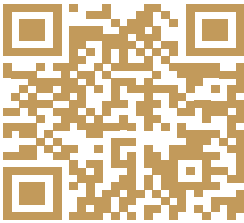

Scan QR code to learn more

SAVE THESE INSTRUCTIONS

W11764336A



CUSTOMER
EXPERIENCE
CENTER

United States
1-800-JENNAIR (536-6247)
553 Benson Road
Benton Harbor, MI 49022–2696

Canada
1-800-536-6247
200–6750 Century Ave.
Mississauga, Ontario L5N 0B7

In some European factories the letter "W" of the part code mentioned herein will be automatically replaced by the number "4000" (e.g. "W12345678" becomes "400012345678")



Guide de démarrage rapide

Guide de démarrage rapide de la cave à vin verticale

Balayer le code QR
pour en savoir plus



INSTRUCTIONS D'UTILISATION

AVERTISSEMENT :


Pour réduire le risque d'incendie, de décharge électrique ou de blessures, lire les INSTRUCTIONS IMPORTANTES DE SÉCURITÉ du guide d'utilisation de votre appareil avant de faire fonctionner cet appareil.

IMPORTANT :

Avant d'utiliser cet appareil, s'assurer qu'il a été bien installé selon le manuel d'utilisation de l'appareil.

L'IU de commande de la température est située au centre des étagères, divisant les compartiments du haut et du bas.

IU DE COMMANDE DE LA TEMPÉRATURE

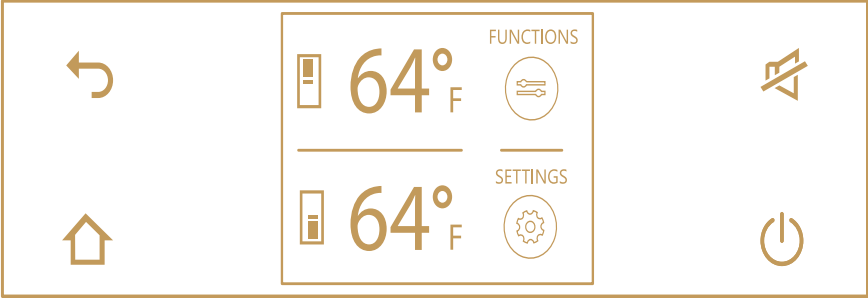

	Mise en MARCHE/ARRÊT Toucher l'icône pour allumer ou éteindre l'appareil
	Accueil Touchez l'icône d'accueil pour revenir à l'écran d'accueil.
	Alarme Toucher l'icône pour afficher les fonctions de tonalité d'alarme et les désactiver.
	Retour Toucher l'icône de la flèche pour revenir à l'écran précédent.

IMPORTANT :

- L'écran principal s'affiche avec la température ambiante mesurée à l'intérieur des compartiments de la cave à vin.
- Lorsque l'appareil est mis en marche pour la première fois, il est recommandé d'attendre au moins 12 heures avant d'y placer du vin.
- Lors de la première mise en marche, il ne sera pas possible d'utiliser le menu pour modifier les réglages d'usine tant que la température préréglée n'aura pas été atteinte.

POINTS DE RÉGLAGES DE LA TEMPÉRATURE

Consulter le manuel du propriétaire pour plus d'informations sur le réglage des températures des compartiments du haut et du bas.

COMPARTIMENT	PLAGE DE TEMPÉRATURE
Zone de rangement du haut	+4 °C (39 °F) à +18 °C (64 °F)
Zone de rangement du bas	+4 °C (39 °F) à +18 °C (64 °F)

TYPLOGIE DU VIN	TEMPÉRATURE DE CONSERVATION	TEMPS DE CONSERVATION
Vins Nouveaux	de 12 °C (54 °F) à 14 °C (57 °F)	6 mois
Vins Mousseux doux	de 8 °C (46 °F) à 10 °C (50 °F)	1 an
Vins Rosés	de 10 °C (50 °F) à 14 °C (57 °F)	1 an
Vins Pétillants	de 10 °C (50 °F) à 12 °C (54 °F)	1-2 ans
Vins Blancs normaux	de 10 °C (50 °F) à 14 °C (57 °F)	1-2 ans
Vins Rouges légers	de 12 °C (54 °F) à 14 °C (57 °F)	2 ans
Vins Mousseux Secs	de 8 °C (46 °F) à 10 °C (50 °F)	2 ans
Vins Mousseux Classiques	de 8 °C (46 °F) à 10 °C (50 °F)	3-4 ans
Vins Blancs Vigoureux ou en Barrique	de 8 °C (46 °F) à 12 °C (54 °F)	3-5 ans
Vins Rouges normaux	de 14 °C (57 °F) à 16 °C (61 °F)	3-5 ans
Vins Rouges Vigoureux ou en Barrique	de 14 °C (57 °F) à 18 °C (64 °F)	7-10 ans
Vins de Paille ou Liqueux	de 16 °C (61 °F) à 18 °C (64 °F)	10-15 ans

AMBRA LIGHT ON/OFF (ACTIVER/DÉSACTIVER L'ÉCLAIRAGE AMBRA)

Lorsque cette fonction est activée, les lumières à l'intérieur de la cave à vin restent allumées même lorsque la porte est fermée. Lorsque la porte est ouverte, les lumières sont blanches pour maximiser la visibilité; lorsque la porte est fermée, la cave à vin s'illumine d'une lumière ambrée. La longue longueur d'onde de la lumière ambrée permet de filtrer la longueur d'onde plus courte de la lumière UV, ce qui contribue à la conservation du vin.

Pour ACTIVER/DÉSACTIVER l'éclairage Ambra :

- ① Toucher le menu des fonctions sur l'IU.
- ② Toucher l'option AMBRA LIGHT ON/OFF (ACTIVER/DÉSACTIVER L'ÉCLAIRAGE AMBRA) pour activer/désactiver cet éclairage.

SETTINGS (RÉGLAGES)

Il est possible de personnaliser les réglages de la cave à vin pour l'adapter aux différentes façons possibles de l'utiliser. Pour obtenir plus d'informations sur les options de personnalisation des réglages, consulter le manuel de l'utilisateur.

DATE 	TIME 	°C / °F 	RESET
DEMO MODE 	FUNCTIONS 	SETTINGS 	AMBRA LIGHT OFF
AMBRA LIGHT ON 	INFO SYSTEM 	SERVICE 	LANGUAGE

INFORMATION DE COMMANDE EN LIGNE

Pour obtenir des instructions détaillées pour l'installation l'entretien, l'hivernisation, ainsi que des conseils de transport, consulter le manuel de l'utilisateur inclus avec votre appareil.


Pour obtenir des informations sur les points suivants : guide complet des programmes, garantie, dimensions détaillées du produit ou instructions complètes d'utilisation et d'installation, visiter le www.jennair.com/create-account ou au Canada le www.jennair.ca/proprietaire. Cette vérification peut vous faire économiser le coût d'une intervention de dépannage. Cependant, si vous avez besoin d'aide supplémentaire, utiliser les coordonnées suivantes selon la région appropriée.

États-Unis :
1-800 JennAir (536-6247)

JennAir Appliances
Customer eXperience Center
553 Benson Road
Benton Harbor, MI 49022-2696

Canada :
1-800-536-6247

JennAir Appliances
Customer eXperience Center
Whirlpool Canada
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7

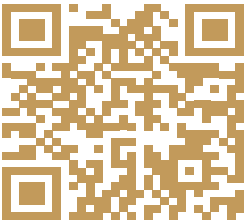

Balayez le code à barres pour en savoir plus

CONSERVER CES INSTRUCTIONS



CUSTOMER
EXPERIENCE
CENTER

United States
1-800-JENNAIR (536-6247)
553 Benson Road
Benton Harbor, MI 49022-2696

Canada
1-800-536-6247
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7

In some European factories the letter "W" of the part code mentioned herein will be automatically replaced by the number "4000" (e.g. "W12345678" becomes "400012345678")